

# TDS Series Touchscreen Digital Storage Oscilloscope User Manual

■ TDS7074

- TDS7104
- TDS8104
- TDS8204
- **TDS8304**
- **TDS9304**

WWW.OWON.COM.HK

#### Nov. 2014 edition V1.4

Copyright © in this Manual belongs to Lilliput Company. All rights reserved.

OWON product is under the protection of the patent rights in America and other countries, including the ones which have already obtained the patent rights and those which are applying for. The information in this manual will replace all that in the materials published originally.

The information in this manual was correct at the time of printing. However, Lilliput will continue to improve product, and reserve the right to update / adjust specification without prior notice.

OWON is the registered trademark Lilliput Company.

#### Headquarter : Fujian Lilliput Optoelectronics Technology Co., Ltd.

The Mansion of Optoelectronics, No. 19 Heming Road, Lantian Industrial Zone Zhangzhou (Fujian Province) 363005 China

Tel: +86.596.213.0430	Fax :	+86.596.210.9272
Web : www.owon.com.hk	E-Mail :	info@owon.com.hk (for general information)
		service@owon.com.hk (for technical support)

Xiamen Office: Xiamen Lilliput Technology Co., Ltd. 5/F, B Area, Chuang Xin Plaza, Software Park, Huandao Road Xiamen 361005 China

Tel: +86.592.257.5666 Fax: +86.592.257.5669

## **General Warranty**

Lilliput Company warrants that the OWON product will be free from defects for a period of 36 months since the original date of purchase of the product, which original Buyer(s) orders directly from the Company. And the warranty period of accessories is 12 months. This warranty only applies to the original purchaser and could not be transferable to the third party. Provided the product proves defective during the warranty period, based upon different situations, Lilliput will either repair the defective product at own cost, or provide replaced parts in exchange of counterpart from the defective product. Parts, modules, or replaced products used by Lilliput in the warranty may be new or reconditioned, to assure better performance.

To obtain better service under this warranty, Buyer should notify Lilliput Company of the defects in a written form (fax, e-mail, or other similar ways) before the expiration of the warranty. Buyer is responsible for packing, and shipping the defective product to the service center / place designated by Lilliput, and attach with a copy of original written proof of purchase (order) as well.

This warranty not applied to any defects, failures, or damages caused by improper operation, or improper / inadequate maintenance. And Lilliput will not be liable for furnishing service during the warranty under these circumstances, a). to repair the damages result from installation, or repairs, or service by unauthorized / unqualified person; b). to repair the damages result from improper operation, or improper connection to incompatible equipment; c). to repair any damage or malfunction caused by the use of non-Lilliput-required / -stipulated supplies; or d). to repair a product that has been modified or integrated with other products.

You may contact the nearest available Lilliput partner / distributor / reseller for warranty services, or collecting one complete version warranty statement.

For better after-sales service, please visit <u>www.owon.com.hk</u>, and register your purchased OWON product online.

For the service items not covered in this summary, or in the applicable warranty statement(s), Lilliput will not be liable for offering guarantee service. Lilliput will not take any responsibilities for any indirect, exceptional, or consequent damages caused towards the OWON product by Buyer(s).

# **Table of contents**

1.	General Safety Requirements	1
2.	Safety Terms and Symbols	2
3.	General Characteristics	4
4.	Junior User Guidebook	5
	Introduction to the Structure of the Oscilloscope Front Panel Rear Panel Control (key and knob) Area	.6 .7
	User Interface Introduction	. 9
	How to Implement the General Inspection	10
	How to Implement the Function Inspection	11
	How to Implement the Probe Compensation	12
	How to Set the Probe Attenuation Coefficient	13
	How to Use the Probe Safely	14
	How to Implement Self-calibration	14
	Introduction to the Vertical System1	14
	Introduction to the Horizontal System	
	Introduction to the Trigger System1	16
	Introduction to the Touchscreen Controls       Introduction to the Touchscreen Controls         Set the Vertical System through touchscreen       Introduction Controls         Set the Horizontal System through touchscreen       Introduction Controls         Zoom the Waveform through Touchscreen       Introduction Controls         Operate the Menu through Touchscreen or Buttons/Knob       Introduction Controls	18 19 19
5.	Advanced User Guidebook	23
	How to Set the Vertical System	24
	Use Mathematical Manipulation Function	27
	Use VERTICAL POSITION and VOLTS/DIV Knobs	30
	How to Set the Horizontal System	
	How to Set the Trigger System	32
	How to Operate the Function Menu	36

How to Save and Recall	
To save the current screen image	41
To save waveform data to reference waveform/storage	41
To save setup files	
To display/remove reference waveforms	
To recall waveform data in storage	
To recall setup files	
To select the path or file in file explorer	
To edit file names	
To save with Copy button push	
To manage file	
How to Implement the Auxiliary System Function Setting	
●Config	
●Display	
• Calibrate	
• Pass/Fail	
• Sync Output	
• System	
How to Measure Automatically	
How to Measure with Cursors How to Use Autoscale	
How to Use Executive Buttons	
6. Communication with PC	
Using USB Port	
Using LAN Port	
Connect directly	
Connect through a router	61
7. Demonstration	
Example 1: Measurement a Simple Signal	
Example 2: Gain of an Amplifier in a Metering Circuit	
Example 3: Capturing a Single Signal	
Example 4: Analyze the Details of a Signal	
Example 5: Application of X-Y Function	
Example 6: Video Signal Trigger	
8. Troubleshooting	
9. Technical Specifications	
General Technical Specifications	
10. Appendix	
**	
Appendix A: Enclosure	
Appendix B: General Care and Cleaning	

# **1. General Safety Requirements**

Before any operations, please read the following safety precautions to avoid any possible bodily injury and prevent this product or any other products connected from damage. In order to avoid any contingent danger, this product is only used within the range specified.

Only the qualified technicians can implement the maintenance.

To avoid Fire or Personal Injury:

- Connect the probe correctly. The grounding end of the probe corresponds to the grounding phase. Please don't connect the grounding end to the positive phase.
- Use Proper Power Cord. Use only the power cord supplied with the product and certified to use in your country.
- **Connect or Disconnect Correctly.** When the probe or test lead is connected to a voltage source, please do not connect and disconnect the probe or test lead at random.
- Product Grounded. This instrument is grounded through the power cord grounding conductor. To avoid electric shock, the grounding conductor must be grounded. The product must be grounded properly before any connection with its input or output terminal.

When powered by AC power, it is not allowed to measure AC power source directly, because the testing ground and power cord ground conductor are connected together, otherwise, it will cause short circuit.

- Check all Terminal Ratings. To avoid fire or shock hazard, check all ratings and markers of this product. Refer to the user's manual for more information about ratings before connecting to the instrument.
- **Do not operate without covers**. Do not operate the instrument with covers or panels removed.
- Avoid exposed circuit. Do not touch exposed junctions and components when the instrument is powered.
- **Do not operate if in any doubt.** If you suspect damage occurs to the instrument, have it inspected by qualified service personnel before further operations.
- Use your Oscilloscope in a well-ventilated area. Make sure the instrument installed with proper ventilation, refer to the user manual for more details.
- Do not operate in wet conditions.
- **Do not operate in an explosive atmosphere.**
- Keep product surfaces clean and dry.

# 2. Safety Terms and Symbols

## **Safety Terms**

**Terms in this manual.** The following terms may appear in this manual:



Warning: Warning indicates the conditions or practices that could result in injury or loss of life.



Caution: Caution indicates the conditions or practices that could result in damage to this product or other property.

Terms on the product. The following terms may appear on this product:

Danger: It indicates an injury or hazard may immediately happen.

Warning: It indicates an injury or hazard may be accessible potentially.


**Caution:** It indicates a potential damage to the instrument or other property might occur.

## **Safety Symbols**

Symbols on the product. The following symbol may appear on the product:



Hazardous Voltage



Refer to Manual



Protective Earth Terminal



Test Ground

To avoid body damage and prevent product and connected equipment damage, carefully read the following safety information before using the test tool. This product can only be used in the specified applications.


## **▲** Warning:

The 4 channels of the oscilloscope are non-isolated electrically. The channels should adopt common basis during measuring. To prevent short circuits, the 2 probe ground must not be connected to different non-isolated DC level.

## / Warning:

The channels should adopt common basis during measuring. To prevent short circuits, the 2 probe ground must not be connected to 2 different non-isolated DC level.

The diagram of the oscilloscope ground wire connection:



It is not allowed to measure AC power when the AC-powered oscilloscope is connected to the AC-powered PC through the ports.

## Marning:

To avoid fire or electrical shock, when the oscilloscope input signal connected is more than 42V peak (30Vrms) or on circuits of more than 4800VA, please take note of below items:

- Only use accessory insulated voltage probes and test lead.
- Check the accessories such as probe before use and replace it if there are any damages.
- Remove probes, test leads and other accessories immediately after use.
- Remove USB cable which connects oscilloscope and computer.
- Do not apply input voltages above the rating of the instrument because the probe tip voltage will directly transmit to the oscilloscope. Use with caution when the probe is set as 1:1.
- Do not use exposed metal BNC or banana plug connectors.
- Do not insert metal objects into connectors.

## **3. General Characteristics**

- ▶ Bandwidth: 70 MHz 300 MHz;
- Sample rate (real time): 1GS/s 3.2GS/s;
- ➢ 7.6M record length
- > Waveform zooming (horizontal / vertical) and saving
- > FFT points (length and resolution variable)
- Multi-window extension
- User-friendly voice warning
- > 8 inch ( $800 \times 600$  pixels) high definition touchscreen
- > Multi-communication interface : USB, VGA, LAN

# 4. Junior User Guidebook

## This chapter deals with the following topics mainly:

- Introduction to the structure of the oscilloscope
- Introduction to the user interface
- How to implement the general inspection
- How to implement the function inspection
- How to make a probe compensation
- How to set the probe attenuation coefficient
- How to use the probe safely
- How to implement an auto-calibration
- Introduction to the vertical system
- Introduction to the horizontal system
- Introduction to the trigger system
- Introduction to the Touchscreen Controls

## Introduction to the Structure of the Oscilloscope

When you get a new-type oscilloscope, you should get acquainted with its front panel at first and the TDS series digital storage oscilloscope is no exception. This chapter makes a simple description of the operation and function of the front panel of the TDS series oscilloscope, enabling you to be familiar with the use of the TDS series oscilloscope in the shortest time.

## **Front Panel**

The TDS series oscilloscope offers a simple front panel with distinct functions to users for their completing some basic operations, in which the knobs and function pushbuttons are included. The knobs have the functions similar to other oscilloscopes. The 5 buttons (F1 - F5) in the column on the right side of the display screen or in the row under the display screen (H1 - H5) are menu selection buttons, through which, you can set the different options for the current menu. The other pushbuttons are function buttons, through which, you can enter different function menus or obtain a specific function application directly.

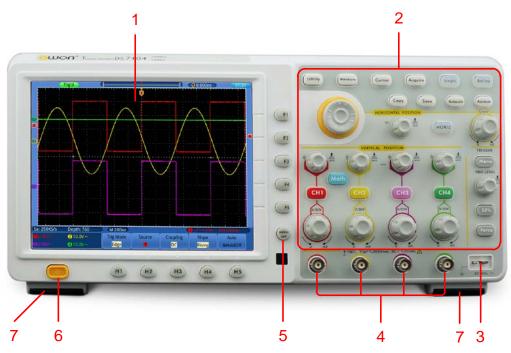


Figure 4-1 Front panel

- 1. Display area
- 2. Control (key and knob) area
- 3. Probe Compensation: Measurement signal (5 V/1 kHz) output.
- **4.** Signal Input of 4 Channels
- 5. Menu off
- 6. Power on/off
- 7. Folding Foot stool in the bottom (which tilt the oscilloscope )

## **Rear Panel**

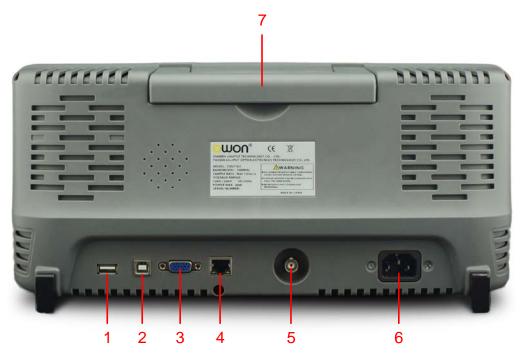


Figure 4-2 Rear Panel

- **1. USB Host port:** It is used to transfer data when external USB equipment connects to the oscilloscope regarded as "host device". For example: upgrading software by USB flash disk needs to use this port.
- **2. USB Device port:** It is used to transfer data when external USB equipment connects to the oscilloscope regarded as "slave device". For example: to use this port when connect PC to the oscilloscope by USB.
- 3. VGA port: To connect the oscilloscope with a monitor or a projector as VGA output.
- 4. LAN port: the network port which can be used to connect with PC.
- 5. The port of trigger signal output & Pass/Fail output
- 6. AC power input jack
- 7. Handle

## Control (key and knob) Area


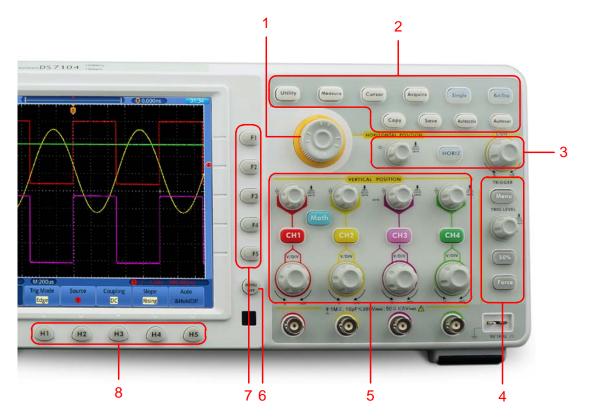


Figure 4-3 Keys Overview

- 1. G knob (General knob): when a G symbol appears in the menu, it indicates you can turn the G knob to select the menu or set the value.
- 2. Function key area: Total 10 keys
- Horizontal control area with 1 key and 2 knobs.
   "HORIZONTAL POSITION" knob control trigger position, "SEC/DIV" control time base, "Horiz" key can enable/disable the split- screen zoom.
- 4. Trigger control area with 3 keys and 1 knob."TRIG LEVEL" knob is to adjust trigger voltage. Other 3 keys refer to trigger system setting.
- 5. Vertical control area with 5 keys and 8 knobs.

CH1 - CH4 keys correspond to setting menu in CH1 - CH4, "Math" key provides access to math waveform functions (+, -,  $\times$ , /, FFT). Four "VERTICAL POSITION" knob control the vertical position of CH1 - CH4, and four "VOLTS/DIV" knob control voltage scale of CH1 - CH4.

- 6. Menu off: turn off the menu
- 7. Menu option setting: F1 F5
- 8. Menu option setting: H1 H5

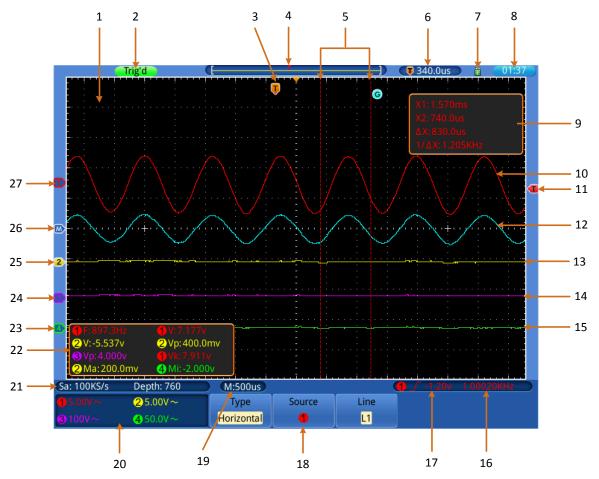

## **User Interface Introduction**

Figure 4-4 Illustrative Drawing of Display Interfaces

- **1.** Waveform Display Area.
- **2.** The state of trigger, including:

Auto: Automatic mode and acquire waveform without triggering.

Trig'd: Trigger detected and acquire waveform.

Ready: Pre-triggered data captured and ready for a trigger.

Scan: Capture and display the waveform continuously.

Stop: Data acquisition stopped.

- 3. T pointer indicates the horizontal position for the trigger.
- 4. The pointer indicates the trigger position in the internal memory.
- 5. Cursors for cursor measurement.
- **6.** Present triggering value.
- 7. It indicates that there is a U disk connecting with the oscilloscope.
- **8.** Setting time (touchable).
- **9.** Cursor measure window, showing the readings of the two cursors and absolute value.
- **10.** The waveform of CH1.

- **11.** The pointer shows the trigger level position of the source in trigger menu.
- **12.** The waveform of Math.
- **13.** The waveform of CH2.
- **14.** The waveform of CH3.
- **15.** The waveform of CH4.
- **16.** The cymometer of the source in trigger menu.
- **17.** Trigger settings of the source in trigger menu. The icon shows the trigger type; the reading shows the trigger level value:
  - **\_\_\_\_** Rising edge or slope triggering
  - L Falling edge or slope triggering
  - **□ □ Pulse triggering**
  - Video line synchronous triggering
  - Video field synchronous triggering
- **18.** The bottom menu bar.
- **19.** The reading shows the setting of main time base.
- **20.** The readings indicate the voltage division of corresponding channels. The icon shows the coupling mode and other settings of the channel:
  - $\therefore$  (DC coupling),  $\sim$  (AC coupling), + (Ground coupling),
  - Ω (Impedance 50Ω),  $\downarrow$  (Inverted), Bw (Band Width 20M).
- **21.** The readings show current sample rate and the record length.
- 22. It indicates the measured type and value of the corresponding channel. The measured type: F(Freq), T(Period), V(Mean), Vp(PK-PK), Vk(RMS), Ma(Max), Mi(Min), Vt(Vtop), Vb(Vbase), Va(Vamp), Os(Overshoot), Ps(Preshoot), RT(Rise Time), FT(Fall Time), PW(+Width), NW(-Width), +D(+Duty), -D(-Duty), 1→2 (Delay), 1→2 (Delay), 3→4 (Delay), 3→4 (Delay).
- **23.** The green pointer indicates the grounding datum point (zero point position) of the waveform of the CH4 channel.
- **24.** The purple pointer indicates the grounding datum point (zero point position) of the waveform of the CH3 channel.
- **25.** The yellow pointer shows the grounding datum point (zero point position) of the waveform of the CH2 channel.
- 26. The blue pointer indicates the zero point position of the waveform of the Math.
- **27.** The red pointer indicates the grounding datum point (zero point position) of the waveform of the CH1 channel.

## How to Implement the General Inspection

After you get a new TDS series oscilloscope, it is recommended that you should make a check on the instrument according to the following steps:

1. Check whether there is any damage caused by transportation.

If it is found that the packaging carton or the foamed plastic protection cushion has suffered serious damage, do not throw it away first till the complete device and its accessories succeed in the electrical and mechanical property tests.

#### 2. Check the Accessories

The supplied accessories have been already described in the "Appendix A: Enclosure" of this Manual. You can check whether there is any loss of accessories with reference to this description. If it is found that there is any accessory lost or damaged, please get in touch with the distributor of Lilliput responsible for this service or the Lilliput's local offices.

#### 3. Check the Complete Instrument

If it is found that there is damage to the appearance of the instrument, or the instrument cannot work normally, or fails in the performance test, please get in touch with the Lilliput's distributor responsible for this business or the Lilliput's local offices. If there is damage to the instrument caused by the transportation, please keep the package. With the transportation department or the Lilliput's distributor responsible for this business informed about it, a repairing or replacement of the instrument will be arranged by the Lilliput.

## How to Implement the Function Inspection

Make a fast function check to verify the normal operation of the instrument, according to the following steps:

# 1. Connect the power cord to a power source. Push down the button of the " $\bigcirc$ " signal on the left bottom.

The instrument carries out all self-check items and shows the Boot Logo. Press the "Utility" button, select **Calibrate** in the left menu, select **Factory Set** in the bottom menu. The default attenuation coefficient set value of the probe in the menu is 10X.

# 2. Set the Switch in the Oscilloscope Probe as 10X and Connect the Oscilloscope with CH1 Channel.

Align the slot in the probe with the plug in the CH1 connector BNC, and then tighten the probe with rotating it to the right side.

Connect the probe tip and the ground clamp to the connector of the probe compensator.

#### 3. Press the "Autoset" Button.

The square wave of 1 kHz frequency and 5V peak-peak value will be displayed in several seconds (see *Figure 4-5*).

4.Junior User Guidebook

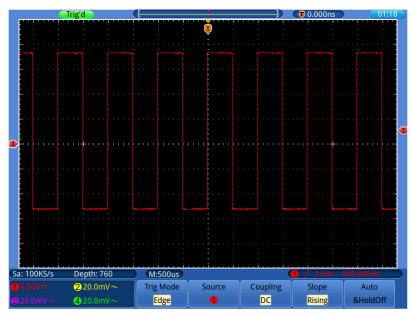



Figure 4-5 Auto set

Check CH2, CH3 and CH4 by repeating Step 2 and Step 3.

## How to Implement the Probe Compensation

When connect the probe with any input channel for the first time, make this adjustment to match the probe with the input channel. The probe which is not compensated or presents a compensation deviation will result in the measuring error or mistake. For adjusting the probe compensation, please carry out the following steps:

- 1. Set the attenuation coefficient of the probe in the menu as 10X and that of the switch in the probe as 10X (see "*How to Set the Probe Attenuation Coefficient*" on P13), and connect the probe with the CH1 channel. If a probe hook tip is used, ensure that it keeps in close touch with the probe. Connect the probe tip with the signal connector of the probe compensator and connect the reference wire clamp with the ground wire connector of the probe connector, and then press the button "Autoset".
- **2.** Check the displayed waveforms and regulate the probe till a correct compensation is achieved (see *Figure 4-6* and *Figure 4-7*).



OvercompensatedCompensated correctlyUnder compensatedFigure 4-6 Displayed Waveforms of the ProbeCompensation

**3.** Repeat the steps mentioned if needed.

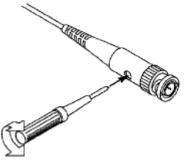


Figure 4-7 Adjust Probe

## How to Set the Probe Attenuation Coefficient

The probe has several attenuation coefficients, which will influence the vertical scale factor of the oscilloscope.

To change or check the probe attenuation coefficient in the menu of oscilloscope:

- (1) Press the function menu button of the used channels (CH1 CH4 button).
- (2) Select **Probe** in the bottom menu; select the proper value in the right menu corresponding to the probe.

This setting will be valid all the time before it is changed again.



#### Caution:

The default attenuation coefficient of the probe on the instrument is preset to 10X.

Make sure that the set value of the attenuation switch in the probe is the same as the menu selection of the probe attenuation coefficient in the oscilloscope.

The set values of the probe switch are 1X and 10X (see *Figure 4-8*).



Figure 4-8 Attenuation Switch



#### Caution:

When the attenuation switch is set to 1X, the probe will limit the bandwidth of the oscilloscope in 5 MHz. To use the full bandwidth of the oscilloscope, the switch must be set to 10X.

## How to Use the Probe Safely

The safety guard ring around the probe body protects your finger against any electric shock, shown as *Figure 4-9*.



Figure 4-9 Finger Guard



### Warning:

To avoid electric shock, always keep your finger behind the safety guard ring of the probe during the operation.

To protect you from suffering from the electric shock, do not touch any metal part of the probe tip when it is connected to the power supply.

Before making any measurements, always connect the probe to the instrument and connect the ground terminal to the earth.

## How to Implement Self-calibration

The self-calibration application can make the oscilloscope reach the optimum condition rapidly to obtain the most accurate measurement value. You can carry out this application program at any time. This program must be executed whenever the change of ambient temperature is  $5^{\circ}$ C or over.

Before performing a self-calibration, disconnect all probes or wires from the input connector. Press the "Utility" button, select **Calibrate** in the left menu, select **Self Calibrate** in the bottom menu. A confirmation window will pop up, select **OK** after everything is ready.

## **Introduction to the Vertical System**

As shown in *Figure 4-10*, there are a few of buttons and knobs in **VERTICAL CONTROLS**. The following practices will gradually direct you to be familiar with the using of the vertical setting.

#### 4.Junior User Guidebook



Figure 4-10 Vertical Control Zone

 Use the button "VERTICAL POSITION" knob to show the signal in the center of the waveform window. The "VERTICAL POSITION" knob functions the regulating of the vertical display position of the signal. Thus, when the "VERTICAL POSITION" knob is rotated, the pointer of the earth datum point of the channel is directed to move up and down following the waveform.

#### Measuring Skill

If the channel is under the DC coupling mode, you can rapidly measure the DC component of the signal through the observation of the difference between the wave form and the signal ground.

If the channel is under the AC mode, the DC component would be filtered out. This mode helps you display the AC component of the signal with a higher sensitivity.

#### Vertical offset back to 0 shortcut key

Turn the **VERTICAL POSITION** knob to change the vertical display position of channel and press the position knob to set the vertical display position back to 0 as a shortcut key, this is especially helpful when the trace position is far out of the screen and want it to get back to the screen center immediately.

2. Change the Vertical Setting and Observe the Consequent State Information Change.

With the information displayed in the status bar at the bottom of the waveform window, you can determine any changes in the channel vertical scale factor.

- Turn the vertical "**VOLTS/DIV**" knob and change the "Vertical Scale Factor (Voltage Division)", it can be found that the scale factor of the channel corresponding to the status bar has been changed accordingly.
- Press buttons of **CH1 CH4** and **Math**, the operation menu, symbols, waveforms and scale factor status information of the corresponding channel will be displayed in the screen.

You can also set the vertical system through touchscreen, see "Set the Vertical System

through touchscreen" on P18.

## **Introduction to the Horizontal System**

Shown as *Figure 4-11*, there are a button and two knobs in the "**HORIZONTAL CONTROLS**". The following practices will gradually direct you to be familiar with the setting of horizontal time base.



Figure 4-11 Horizontal Control Zone

- 1. Use the horizontal "SEC/DIV" knob to change the horizontal time base setting and observe the consequent status information change. Rotate the horizontal "SEC/DIV" knob to change the horizontal time base, and it can be found that the "Horizontal Time Base" display in the status bar changes accordingly.
- 2. Use the "HORIZONTAL POSITION" knob to adjust the horizontal position of the signal in the waveform window. The "HORIZONTAL POSITION" knob is used to control the triggering displacement of the signal or for other special applications. If it is applied to triggering the displacement, it can be observed that the waveform moves horizontally with the knob when you rotate the "HORIZONTAL POSITION" knob.

#### Triggering displacement back to 0 shortcut key

Turn the **HORIZONTAL POSITION** knob to change the horizontal position of channel and press the **HORIZONTAL POSITION** knob to set the triggering displacement back to 0 as a shortcut key.

**3.** With the "**Horiz**" button, you can do the Window Setting and the Window Expansion.

## **Introduction to the Trigger System**

As shown in *Figure 4-12*, there are one knob and three buttons make up "**TRIGGER CONTROLS**". The following practices will direct you to be familiar with the setting of the trigger system gradually.

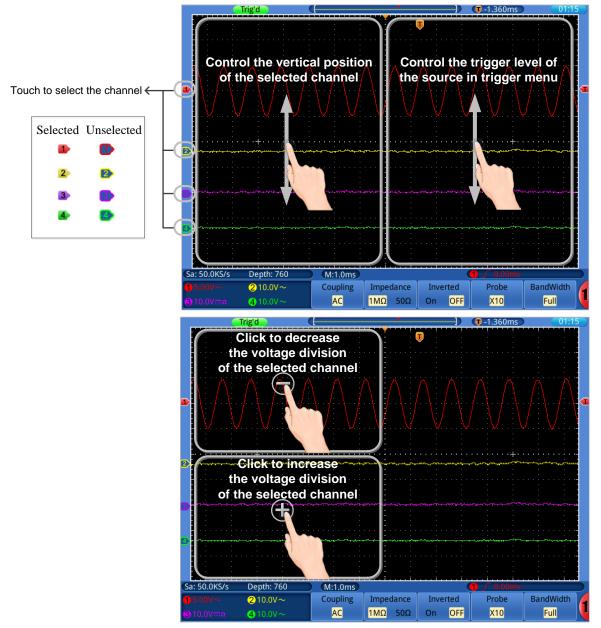


Figure 4-12 Trigger Control Zone

- **1.** Press the "**Trigger Menu**" button and call out the trigger menu. With the operations of the menu selection buttons, the trigger setting can be changed.
- 2. Use the "TRIG LEVEL" knob to change the trigger level setting. By rotating the "TRIG LEVEL" knob, the trigger indicator in the screen will move up and down. With the movement of the trigger indicator, it can be observed that the trigger level value displayed in the screen changes accordingly.
  PS: Turning the TRIG LEVEL knob can change trigger level value and it is also the hotkey to set trigger level back to 0.
- **3.** Press the button "**50%**" to set the trigger level as the vertical midpoint values of the amplitude of the trigger signal.
- **4.** Press the "**Force**" button to force a trigger signal, which is mainly applied to the "Normal" and "Single" trigger modes.


## **Introduction to the Touchscreen Controls**

When **Gesture** is ON, which is set in menu **Utility**->**Display**->**Gesture** (*Page 45*), you can control the oscilloscope by touching different areas of the screen. You can also use the buttons / knobs enclosed in brackets to do the same thing.



### Set the Vertical System through touchscreen

- Select a channel (CH1 CH4 buttons): Touch the pointer on the left side of corresponding channel to make it in selected state.
- Set the vertical position of the selected channel (VERTICAL POSITION knob): Swipe up or down on the left half of the screen.
- Set the trigger level of the source in trigger menu (TRIG LEVEL knob): Swipe up or down on the right half of the screen.
- Set the voltage division of the selected channel (vertical VOLTS/DIV knob): Click on the upper left area to decrease the voltage division; click on the lower left area to increase the voltage division.

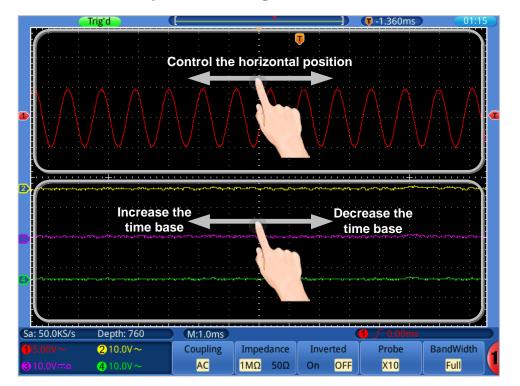

## Set the Horizontal System through touchscreen

- Set the horizontal position (HORIZONTAL POSITION knob): Swipe left or right on the top half of the screen.
- Set the horizontal time base (horizontal SEC/DIV knob): Swipe left or right on the bottom half of the screen.


## Zoom the Waveform through Touchscreen

Press the **Horiz** button, the display divides in half. The top half of the display shows the Main window and the bottom half displays the Zoom window.

#### • Vertical Operations


The vertical operations in Main/Zoom window are the same as in normal mode.

4.Junior User Guidebook

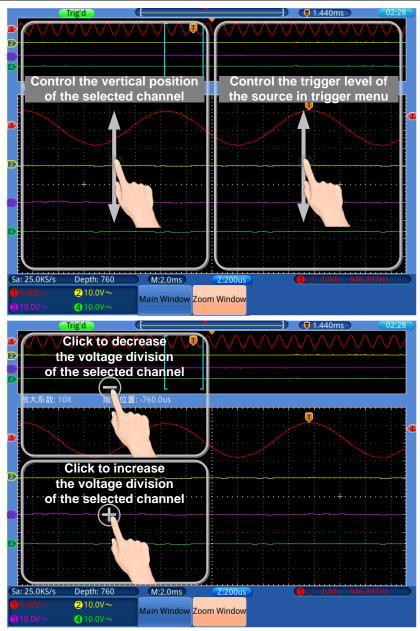


#### Horizontal Operations

When **Zoom Window** in the bottom menu is selected, the horizontal operations using touchscreen are shown in the figure below:

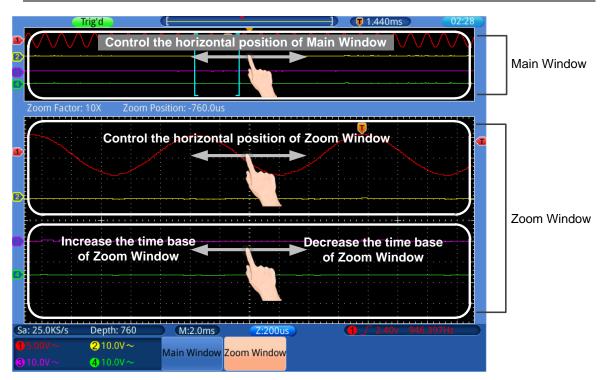


When **Main Window** in the bottom menu is selected, the horizontal operations using touchscreen are shown in the figure below:

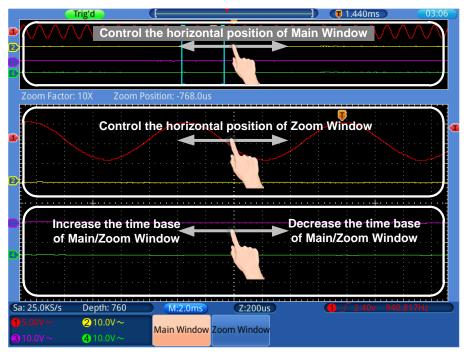

## **Operate the Menu through Touchscreen or Buttons/Knob**

- Select a menu item: Touch the menu items in the bottom menu (H1 H5 buttons), or in the right menu (F1 F5 buttons), or in the left menu (G knob).
- Switch menu items: If there are options that can be switched in the menu, you can repeatedly touch the area of the menu item to switch, or press the corresponding button to switch. See figure below:

#### 4.Junior User Guidebook

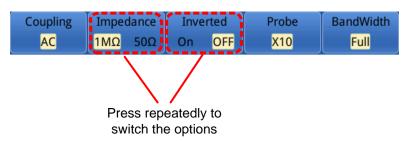

• Scroll the list: If there is a scroll bar in the left menu or in the file system window, you can swipe up and down to scroll the list.


#### Note:

When a  $\bigcirc$  symbol appears in the menu, it indicates you can turn the **G** knob to select the menu item or set the value.

When there is  $\overline{\mathbf{N}}$  in the menu, select it to return to the main menu.

#### Other operations using touchscreen

- **Display the Measure Menu** (**Measure** button): Touch the measure window to display the Measure Menu in the bottom menu.
- Display the Cursor Measure Menu (Cursor button): Touch the cursor measure window to display the Cursor Measure Menu in the bottom menu.
- Set the system time: Touch the time in the top right corner of the screen to display the time setting window.

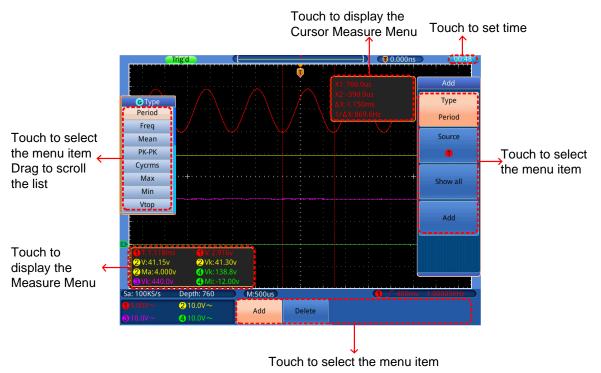

# 5. Advanced User Guidebook

Up till now, you have already been familiar with the basic operations of the function areas, buttons and knobs in the front panel of the oscilloscope. Based the introduction of the previous Chapter, the user should have an initial knowledge of the determination of the change of the oscilloscope setting through observing the status bar. If you have not been familiar with the above-mentioned operations and methods yet, we advise you to read the section of Chapter 4 "Junior User Guidebook".

This chapter will deal with the following topics mainly:

- How to Set the Vertical System
- Use Mathematical Manipulation Function
- How to Set the Horizontal System
- How to Set the Trigger System
- How to Implement the Sampling Setup
- How to Set the Display System
- How to Save and Recall
- How to Implement the Auxiliary System Function Setting
- How to Implement the Automatic Measurement
- How to Implement the Cursor Measurement
- How to Use Autoscale function
- How to Use Executive Buttons

It is recommended that you read this chapter carefully to get acquainted the various measurement functions and other operation methods of the TDS series oscilloscope.

## How to Set the Vertical System

The VERTICAL CONTROLS includes 5 menu buttons such as CH1 - CH4 and Math, and 8 knobs such as VERTICAL POSITION, VOLTS/DIV for each channel.

#### Setting of CH1 - CH4

Each channel has an independent vertical menu and each item is set respectively based on the channel.

#### To turn waveforms on or off (channel, math)

Pressing the CH1 - CH4 or Math buttons have the following effect:

- If the waveform is off, the waveform is turned on and its menu is displayed.
- If the waveform is on and its menu is not displayed, its menu will be displayed.
- If the waveform is on and its menu is displayed, the waveform is turned off and its menu goes away.

Coupling	Impedance		Inverted		Probe	BandWidth
AC	<u>1MΩ</u>	50Ω	On	OFF	<mark>X10</mark>	Full

The description of the Channel Menu is shown as the following list:

Function Menu	Setting	Description	
	DC	Pass both AC and DC components of the input signal.	
Coupling	AC	Block the DC component of the input signal.	
	Ground	Disconnect the input signal.	
		Select the input impedance to use. When $50\Omega$ is	
Impadance	1MΩ	selected, AC in coupling is not available. If the	
Impedance	50Ω	impedance is set to $50\Omega$ when using AC coupling, the	
		coupling will be set to DC automatically.	
Inverted ON OFF		Display inverted waveform.	
		Display original waveform.	
X1			
Probe	X10	Match this to the probe attenuation factor to have an	
FIODE	X100	accurate reading of vertical scale.	
	X1000		
	Full	Get full bandwidth.	
Limit	20M	Limit the channel bandwidth to 20 MHz to reduce	
		display noise.	

#### 1. To set channel coupling

Taking the Channel 1 for example, the measured signal is a square wave signal containing the direct current bias. The operation steps are shown as

below:

- (1) Press the CH1 button to show channel menu.
- (2) Select **Coupling** in the bottom menu.
- (3) Select **DC** in the right menu. Both DC and AC components of the signal are passed.
- (4) Select AC in the right menu. The direct current component of the signal is blocked.

#### 2. To adjust the probe attenuation

For correct measurements, the attenuation coefficient settings in the operating menu of the Channel should always match what is on the probe (see "*How to Set the Probe Attenuation Coefficient*" on P13). If the attenuation coefficient of the probe is 1:1, the menu setting of the input channel should be set to X1.

Take the Channel 1 as an example; the attenuation coefficient of the probe is 10:1, the operation steps are shown as follows:

- (1) Press the CH1 button to show menu.
- (2) Select **Probe** in the bottom menu. Select  $\times 10$  in the right menu.

Attenuation Coefficient of the Probe	<b>Corresponding Menu Setting</b>
1:1	X1
10:1	X10
100:1	X100
1000:1	X1000

#### 3. To invert a waveform

Waveform inverted: the displayed signal is turned 180 degrees against the phase of the earth potential.

Taking the Channel 1 for example, the operation steps are shown as follows:

- (1) Press the CH1 button to show channel menu.
- (2) Select ON for Inverted item. The waveform is inverted.
- (3) Select **OFF** for **Inverted** item. The waveform goes back to its original one.

#### 4. To set bandwidth limit

When high frequency components of a waveform are not important to its analysis, the bandwidth limit control can be used to reject frequencies above 20 MHz.

Taking the Channel 1 for example, the operation steps are shown as below:

- (1) Press the CH1 button to show channel menu.
- (2) Select **BandWidth** in the bottom menu.
- (3) Select **Full** in the right menu. The high frequency of the signal will be allowed to pass.
- (4) Select **20M** in the right menu. The bandwidth is limited to 20 MHz. The frequencies above 20MHz will be rejected.

## **Use Mathematical Manipulation Function**

The **Mathematical Manipulation** function is used to show the results of the addition, multiplication, division and subtraction operations between two channels, or the FFT operation for a channel. Press the **Math** button to display the menu on the bottom.

The corresponding FCL (Functional Capabilities List) of the **Waveform** Calculation:

Function Menu		Setting	Description
	Factor1	(1) (2) (3) (4)	Select the signal source of the factor1
Dual Wfm	Operator	+ - × /	Select the operator of mathematical manipulation
Math	Math (1) (2)	Select the signal source of the factor2	
	Vertical		Switch to select the vertical position or voltage division of the Math waveform, turn the <b>G</b> knob to adjust it
FFT	Source	1 2 3 4	FFT source

		Rectangle	
		Hanning	
	Window	Hamming	Select window for FFT.
	Window	Blackman	Scheet whildow for FF F.
		Bartlett	
		Kaiser	
	Format	Vrms	Select Vrms for Format.
	Format	dB	Select dB for Format.
		Hz	Switch to select the horizontal position or
	Horizontal	Hz/div	time base of the FFT waveform, turn the <b>G</b> knob to adjust it
		div	Switch to select the vertical position or
	Vertical	v or dB	voltage division of the FFT waveform, turn the $\mathbf{G}$ knob to adjust it

Taking the additive operation between Channel 1 and Channels 2 for example, the operation steps are as follows:

- 1. Press the **Math** button to display the math menu in the bottom. The blue M waveform appears on the screen.
- 2. Select **Dual Wfm Math** in the bottom menu.
- 3. Select **Factor1** in the right menu; select ① in the left source menu.
- 4. Select **Operator** as + in the right menu.
- 5. Select Factor2 in the right menu; select ② in the left source menu.
- 6. Select Vertical in the right menu; select repeatedly to make the G symbol in front of div, turn the G knob to adjust the vertical position of Math waveform; then select to make the G symbol in front of the voltage below, turn the G knob to adjust the voltage division of Math waveform.

## **Using FFT function**

The FFT (fast Fourier transform) math function mathematically converts a time-domain waveform into its frequency components. It is very useful for analyzing the input signal on Oscilloscope. You can match these frequencies with known system frequencies, such as system clocks, oscillators, or power supplies.

Taking the FFT operation for example, the operation steps are as follows:

**1.** Press the **Math** button to display the math menu in the bottom. The blue M waveform appears on the screen.

- 2. Select **FFT** in the bottom menu.
- 3. Select Source in the right menu; select 1 in the left source menu.
- 4. Select Window in the right menu; select the proper window type in the left menu.
- 5. Select **Format** as Vrms or dB in the right menu.
- 6. Select Horizontal in the right menu; select repeatedly to make the G symbol in front of Hz, turn the G knob to adjust the horizontal position of FFT waveform; then select to make the G symbol in front of the Hz/div below, turn the G knob to adjust the time base of FFT waveform.
- 7. Select **Vertical** in the right menu; do the same operations as above to set the vertical position and voltage division.

#### To select the FFT window

■ There are 6 FFT windows. Each one has trade-offs between frequency resolution and magnitude accuracy. What you want to measure and your source signal characteristics help you to determine which window to use. Use the following guidelines to select the best window.

Туре	Characteristics	Window
Rectangle	<ul> <li>Best solution for frequency, worst for magnitude.</li> <li>Best type for measuring the frequency spectrum of nonrepetitive signals and measuring frequency components near DC.</li> <li>Recommend to use for: <ul> <li>Transients or bursts, the signal level before and after the event are nearly equal.</li> <li>Equal-amplitude sine waves with frequencies those are very close.</li> <li>Broadband random noise with a relatively slow varying spectrum.</li> </ul> </li> </ul>	
Hanning	<ul> <li>Good for magnitude, but poorer frequency resolution than Hamming.</li> <li>Recommend to use for:</li> <li>Sine, periodic and narrow band random noise.</li> <li>Transients or bursts where the signal levels before and after the event are significantly different.</li> </ul>	

		1 1
	Better solution for magnitude than Rectangle, and good for frequency as well. It has slightly better frequency resolution than Hanning.	
Hamming	Recommend to use for:	$\frown$
Training	• Sine, periodic and narrow band random noise.	$ \searrow  $
	• Transients or bursts where the signal levels before and after the event are significantly different.	
	Best solution for magnitude, worst for frequency.	
Blackman	Recommend to use for:	$\wedge$
	• Single frequency waveforms, to find higher order harmonics.	
Bartlett	The Bartlett window is a slightly narrower variant of the triangular window, with zero weight at both ends.	
	The frequency resolution when using the Kaiser window is fair; the spectral leakage and amplitude accuracy are both good.	
Kaiser	The Kaiser window is best used when frequencies are very close to the same value but have widely differing amplitudes (the side lobe level and shape factor are closest to the traditional Gaussian RBW). This window is also good for random signals.	

#### Notes for using FFT

- Use Zoom function to magnify the FFT waveform if necessary, see "Zoom the Waveform" on P31.
- Use the default **dB** scale for details of multiple frequencies, even if they have very different amplitudes. Use the **Vrms** scale to compare frequencies.
- DC component or offset can cause incorrect magnitude values of FFT waveform. To minimize the DC component, choose AC Coupling on the source signal.
- To reduce random noise and aliased components in repetitive or single-shot events, set the oscilloscope acquisition mode to average.

#### What is Nyquist frequency?

The Nyquist frequency is the highest frequency that any real-time digitizing oscilloscope can acquire without aliasing. This frequency is half of the sample rate. Frequencies above the Nyquist frequency will be under sampled, which causes

aliasing. So pay more attention to the relation between the frequency being sampled and measured.

## Use VERTICAL POSITION and VOLTS/DIV Knobs

1. The **VERTIVAL POSITION** knob is used to adjust the vertical positions of the captured waveforms. When turning this knob, the information of vertical position will be displayed on the bottom left of the waveform display area; it will disappear after stopping turning the knob.

The analytic resolution of this control knob changes with the vertical division.

2. The **VOLTS/DIV** knob is used to regulate the vertical resolution of the captured waveforms. The sensitivity of the vertical division steps as 1-2-5. The information of voltage division is displayed in channel window on the bottom left of the screen.

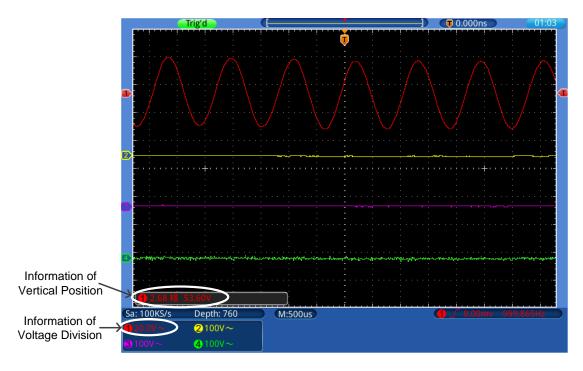


Figure 5-1 Vertical Information

## How to Set the Horizontal System


The **HORIZONTAL CONTROLS** includes the **Horiz** button and such knobs as **HORIZONTAL POSITION** and **SEC/DIV**.

1. HORIZONTAL POSITION knob: this knob is used to adjust the horizontal positions of 4 channels, the analytic resolution of which changes with the time base.

- **2. SEC/DIV** knob: it is used to set the horizontal scale factor in the main window or the zoom window.
- **3. Horiz** button: View the waveform in zoom mode and analyze the detail of the signal. For more detailed operations, see the introductions below.

### Zoom the Waveform

Press the **Horiz** button, the display divides in half. The top half of the display shows the Main window and the bottom half displays the Zoom window. The Zoom window is a magnified portion of the Main window.

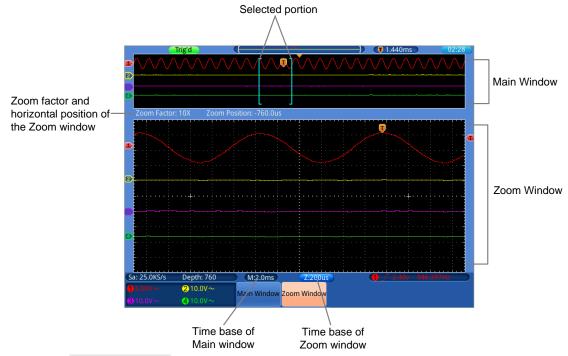

- When **Main Window** is selected in the bottom menu, the **HORIZONTAL POSITION** and **SEC/DIV** knobs are used to adjust the horizontal position and time base of the Main window. The time base of Zoom window is changed as well.
- When **Zoom Window** is selected in the bottom menu, the **HORIZONTAL POSITION** and **SEC/DIV** knobs are used to adjust the horizontal position and time base of the Zoom window.

#### Note:

When the time base of the Zoom window is same as the Main window, the interface will get back to the normal mode automatically, the zoom mode will be turned off.

You can also zoom the waveform through touchscreen, see "Zoom the Waveform through Touchscreen" on P19.

# How to Set the Trigger System

Trigger determines when TDS starts to acquire data and display waveform. Once trigger is set correctly, it can convert the unstable display to meaningful waveform.

When TDS starts to acquire data, it will collect enough data to draw waveform on left of trigger point. TDS continues to acquire data while waiting for trigger condition to occur. Once it detects a trigger it will acquire enough data continuously to draw the waveform on right of trigger point.

Trigger control area consists of 1 knob and 3 menu keys.

- **TRIG LEVEL**: The knob that set the trigger level; press the knob and the level will be cleaned to Zero.
- **50%**: The instant execute button setting the trigger level to the vertical midpoint between the peaks of the trigger signal.
- Force: Force to create a trigger signal and the function is mainly used in "Normal" and "Single" mode.

Trigger Menu: The button that activates the trigger control menu.

## **Trigger Control**

Trigger: Use a trigger level to capture stable waveforms in 4 channels simultaneously.

Trigger has four modes: edge trigger, video trigger, slope trigger and pulse trigger.

**Edge Trigger**: It occurs when the trigger input passes through a specified voltage level with the specified slope.

Video Trigger: Trigger on fields or lines for standard video signal.

**Slope Trigger**: The oscilloscope begins to trigger according to the signal rising or falling speed.

Pulse Trigger: Find pulses with certain widths.

The four trigger modes in Trigger are described respectively as follows:

## 1. Edge Trigger

An edge trigger occurs on trigger threshold value of input signal. Select Edge trigger mode to trigger on rising edge or falling edge.

Menu	Settings	Instruction	
Trigger Mode	Edge	Set vertical channel trigger type as edge trigger.	
Source	1	Channel 1 as trigger signal.	
	2	Channel 2 as trigger signal.	
	3	Channel 3 as trigger signal.	
	4	Channel 4 as trigger signal.	

The description of the Edge Trigger Menu is as follows:

	AC	Plack the direct current component		
	-	Block the direct current component.		
	DC	Allow all component pass.		
	HF	Block the high-frequency signal, only low-frequency		
Coupling		component pass.		
	LF	Block the low-frequency signal, only high-frequency		
		component pass.		
Slope	Rising	Trigger on rising edge		
Slope	Falling	Trigger on falling edge		
	Auto Acquire waveform even no trigger occurs			
Mode	Normal	Acquire waveform when trigger occurs		
Mode	Single	When trigger occurs, acquire one waveform then stop		
Holdoff	Holdoff	100 ns - 10 s, turn the G knob to set time interval before		
noidoll		another trigger occur.		
	Reset	Reset Set Holdoff time as default value (100 ns).		

## 2. Video Trigger

Choose video trigger to trigger on fields or lines of NTSC, PAL or SECAM standard video signals.

MENU	SETTING	INSTRUCTION
Trigger	Video	Set vertical channel trigger type as video trigger
Mode		
	1	Channel 1 as trigger signal.
Source	2	Channel 2 as trigger signal.
Source	3	Channel 3 as trigger signal.
	4	Channel 4 as trigger signal.
	NTSC	
Modu	PAL	Select video modulation
	SECAM	
	Line	Synchronic trigger in video line
	Field	Synchronic trigger in video field
Sync	Odd	Synchronic trigger in video odd filed
	Even	Synchronic trigger in video even field
	Line NO.	Synchronic trigger in designed video line, turn the G
		knob to set the line number
Mode	Auto	Acquire waveform even no trigger occurred
Mode	Holdoff	100 ns - 10 s, turn the <b>G</b> knob to set time interval
Holdoff		before another trigger occur
noidoil	Reset	Set Holdoff time as 100 ns

The description of the Video Trigger Menu is as follows:

## 3. Pulse Width Trigger

Pulse trigger occurs according to the width of pulse. The abnormal signals can be detected through setting up the pulse width condition.

MENU	SETTING	INSTRUCTION
Trigger Mode	Pulse	Set vertical channel trigger type as pulse trigger.
	1	Channel 1 as trigger signal.
Source	2	Channel 2 as trigger signal.
Source	3	Channel 3 as trigger signal.
	4	Channel 4 as trigger signal.
	AC	Not allow DC portion to pass.
	DC	Allow all portion pass.
Coupling	HF	Not allow high frequency of signal pass and only low
Coupling		frequency portion pass.
	LF	Not allow low frequency of signal pass and only high
		frequency portion pass
	Polarity → ← → ←	Choose the polarity
When	$ \begin{array}{c}                                   $	Select pulse width condition and turn the G knob to set time.
	Auto	Acquire waveform even no trigger occurred
Mode	Normal	Acquire waveform when trigger occurred
MOUC	Single	When trigger occurs, acquire one waveform then stop
Holdoff	Holdoff	100  ns - 10  s, turn <b>G</b> knob to set time interval before
11010011		another trigger occur.
	Reset	Set Holdoff time as 100 ns

#### The description of the **Pulse Width Trigger Menu** is as follows:

## 4. Slope Trigger

Slope trigger sets the oscilloscope as the positive/negative slope trigger within the specified time.

The description of the **Slope Trigger Menu** is as follows:

MENU	SETTING	INSTRUCTION
Trigger Mode	Slope	Set vertical channel trigger type as slope trigger.
	1	Channel 1 as trigger signal.
Source	(2)	Channel 2 as trigger signal.
Boulee	3	Channel 3 as trigger signal.
	4	Channel 4 as trigger signal.
	slope	Slope selecting
When		Set slope condition; turn the G knob to set slope time.

	Slew Rate	Slew Rate = (High level - Low level) / Settings
Threshold	High level	Turn <b>G</b> knob to set the High level upper limit.
1110010	Low level	Turn <b>G</b> knob to set Low level lower limit.
&SlewRate	Slew Rate	Slew Rate = (High level - Low level) / Settings
	Auto	Acquire waveform even no trigger occurred
Mode	Normal	Acquire waveform when trigger occurred
Mode	Single	When trigger occurs, acquire one waveform then stop
Holdoff	Holdoff	100  ns - 10  s, turn the <b>G</b> knob to set time interval
noidoll		before another trigger occur.
	Reset	Set Holdoff time as 100 ns

### **Term interpretation**

### 1. Source

Trigger can occur from one of the input channels (CH1 - CH4). The channel will work when selected as a trigger source whatever displayed or not.

### 2. Trigger Mode

The trigger mode determines how the oscilloscope behaves in the absence of a trigger event. The oscilloscope provides three trigger modes: Auto, Normal, and Single.

- Auto: This sweep mode allows the oscilloscope to acquire waveforms even when it does not detect a trigger condition. If no trigger condition occurs while the oscilloscope is waiting for a specific period (as determined by the time-base setting), it will force itself to trigger.
- Normal: The Normal mode allows the oscilloscope to acquire a waveform only when it is triggered. If no trigger occurs, the oscilloscope keeps waiting, and the previous waveform, if any, will remain on the display. Single: In Single mode, after pressing the **Run/Stop** key, the oscilloscope waits for trigger. While the trigger occurs, the oscilloscope acquires one waveform then stop.
- **Single:** In Single mode, after pressing the **Run/Stop** key, the oscilloscope waits for trigger. While the trigger occurs, the oscilloscope acquires one waveform then stop.

## 3. Coupling

Trigger coupling determines what part of the signal passes to the trigger circuit. Coupling types include AC, DC, LF Reject and HF Reject.

- •AC: AC coupling blocks DC components.
- DC: DC coupling passes both AC and DC components.
- •LF Reject: LF Reject coupling blocks DC component, and attenuates all signal with a frequency lower than 8 kHz.
- **HF Reject:** HF Reject coupling attenuates all signals with a frequency higher than 150 kHz.

## 4. Holdoff

Trigger holdoff can be used to stabilize a waveform. The holdoff time is the oscilloscope's waiting period before starting a new trigger. The oscilloscope will not

trigger until the holdoff time has expired. It provides a chance for user to check the signal in a short period and helps to check some complex signals, such as AM waveform etc.

# How to Operate the Function Menu

The function menu control zone includes 6 function menu buttons: Utility, Measure, Cursor, Acquire, Save, Autoscale and 4 immediate-execution buttons: Autoset, Run/Stop, Single, Copy.

# How to Implement Sampling Setup

Press the Acquire button; select Mode or Length to set sampling.

<b>Function Menu</b>	Setting	Description
Sample		Normal sampling mode.
Peak detect		Use to capture maximal and minimal samples. Finding highest and lowest points over adjacent intervals. It is used for the detection of the jamming burr and the possibility of reducing the confusion.
Average	4、8、16、32、64、 128、256、512	It is used to reduce the random and don't-care noises, with the optional number of averages.

The description of the **Mode** menu is shown as follows:

The description of the **Length** menu is shown as follows:

<b>Function Menu</b>	Setting	Description
	760	
	7.6K	
Length	76K	Choose the record length
	760K	
	7.6M	

Change the **Mode** settings and observe the consequent variation of the wave form displayed.

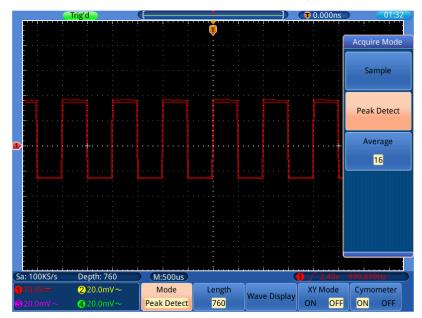


Figure 5-2 Peak Detect mode, under which the burrs on the falling edge of the square wave, can be detected and the noise is heavy

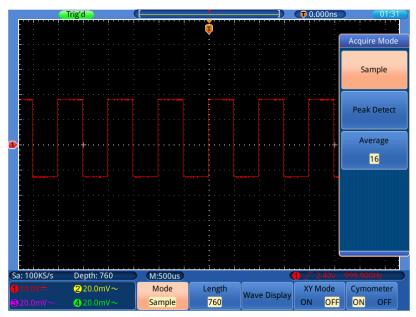


Figure 5-3 Normal ACQU Mode display, in which no burr can be detected.

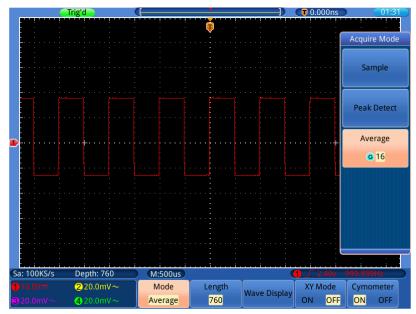


Figure 5-4 The displayed waveform after the noise is removed under the Average Mode, in which the average number of 16 is set.

# How to Set the Display System

Press the Acquire button; select Wave Display, XY Mode or Cymometer to set the display system.

<b>Function Menu</b>		Setting	Description
		Dots	Only the sampling points are displayed.
	Туре	Vect	The space between the adjacent sampling points
			in the display is filled with the vector form.
		OFF	
		100ms	
Wave	Persist	200ms	
Display		•••	Turn the <b>G</b> knob to set the persistence time
	Time	9.9s	
		10s	
		Infinity	
	Persistence		Turn off persistence and clear the display.
	OFF		
			Erase the results of previous acquisitions from
	Clear		the display. The oscilloscope will start to
			accumulate acquisitions again.
vv			Turn on the XY display function.
XY Mode		OFF	Turn off the XY display function.
Cymometer		ON	Turn on the cymometer.
		OFF	Turn off the cymometer.

The description of the **Display Set Menu** is shown as follows:

## **Display Type**

Press the Acquire button; select Wave Display in the bottom menu, select Type in the right menu. You can switch between Dots and Vect.

## Persist

When the **Persist** function is used, the persistence display effect of the picture tube oscilloscope can be simulated. The reserved original data is displayed in fade color and the new data is in bright color.

Press the Acquire button; select Wave Display in the bottom menu, select **Persist Time** in the right menu. Turn the G knob to select different persist time, including OFF, 100ms - 10s and Infinity. When the "Infinity" option is set for Persist Time, the measuring points will be stored till the controlling value is changed.

Select **Persistence OFF** to turn off persistence and clear the display.

Select **Clear** to erase the results of previous acquisitions from the display. The oscilloscope will start to accumulate acquisitions again.

## XY Mode

XY Mode is used to display the amplitude from one waveform against the amplitude from another. The data point from the first waveform specifies the horizontal location, while the corresponding data point from the second waveform specifies the vertical location for each displayed point.

The red waveform is CH1 versus CH2; the purple waveform is CH3 versus CH4.

The oscilloscope is set in the un-triggered sample mode: the data are displayed as bright spots.

### The operations of all control knobs are as follows:

- The Vertical VOLTS/DIV and the VERTICAL POSITION knobs of CH1 are used to set the horizontal scale and position of the red waveform.
- The Vertical VOLTS/DIV and the VERTICAL POSITION knobs of CH2 are used to set the vertical scale and position of the red waveform.
- The Vertical VOLTS/DIV and the VERTICAL POSITION knobs of CH3 are used to set the horizontal scale and position of the purple waveform.
- The Vertical VOLTS/DIV and the VERTICAL POSITION knobs of CH4 are used to set the vertical scale and position of the **purple** waveform.

### Note:

- 1. If one of the paired channels is on, the other is off, after entering the XY mode, the closed channel will be turned on automatically.
- 2. In the XY mode, if you turn off a channel, the other channel that pair with it will

be turned off automatically.

**3.** When the XY Mode is turned on, the reference waveform that has been displayed will be removed from the display automatically.

Operation steps:

- **1.** Press the **Acquire** button.
- 2. Select XY Mode as ON or OFF in the bottom menu.

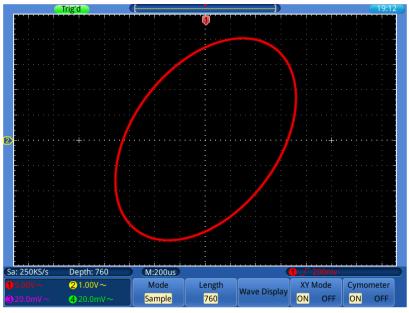


Figure 5-5 XY Display Mode

## Cymometer

It is a 6-digit cymometer. The cymometer can measure frequencies from 2Hz to the full bandwidth. Only if the measured channel has triggering signal and in **Edge** mode, it can measure frequency correctly. It is a one channel cymometer and it can only measure the frequency of the triggering channel. The cymometer is displayed at the right bottom of the screen.

To turn the cymometer on or off:

- 1. Press the Acquire button.
- 2. Select Cymometer as ON or OFF in the bottom menu.

## How to Save and Recall

Oscilloscope screen images can be saved to internal/external storage in JPG, BMP or PNG formats.

Acquired waveform data can be saved to one of 4 reference waveforms or to internal/external storage in CSV or BIN formats.

Oscilloscope setups files can be saved to one of 15 internal locations or to

internal/external storage in SET format.

## To save the current screen image

The screen image can be saved to internal/external storage in JPG, BMP or PNG formats.

- **1.** Press the **Save** button.
- 2. Select Save in the bottom menu; select Save Image to display the file explorer.
- **3.** Select the save location, see "*To select the path or file in file explorer*" on P43.
- **4.** In the right menu, select **File format** repeatedly to switch between .jpg/.bmp/.png.
- 5. The path and file name are shown in the Save To: line in the bottom. If you want to customize the file name, select Edit file name in the right menu, see "To edit file names" on P43.
- 6. Select OK Save in the right menu.

You can also save the image by just pressing the **Copy** button, see "*To save with Copy button push*" on P44.

## To save waveform data to reference waveform/storage

Waveform data consists of the numeric values for each point in the waveform. The waveform data of a channel or a reference waveform can be saved to one of 4 reference waveforms or to internal/external storage. To save the current waveform data:

- 1. Press the Save button.
- 2. Select Save in the bottom menu; select Save Waveform.
- **3.** Select **Source** in the right menu; in the left menu, select an opened channel or a previously stored reference waveform.
- **4.** Select **Destination** in the right menu; in the left menu, select one of 4 reference waveforms R1 R4, or select **File** to save to internal/external storage.
- 5. Select Cut in the right menu repeatedly to switch between Screen data or All data.
- 6. If the Destination is reference waveform, skip this step. If it is File, you can select File detail to enter the file explorer. The path and file name are shown in the Save To: line in the bottom. Select the save location, see "To select the path or file in file explorer" on P43. In the right menu, select File format repeatedly to switch between .csv/.bin. If you want to customize the file name, select Edit file name in the right menu, see "To edit file names" on P43. Select OK Save in the right menu.
- 7. Select **OK Save** in the right menu.

You can also save the waveform data by just pressing the **Copy** button, see "*To save with Copy button push*" on P44.

You can also save the reference waveform to storage in **Ref** menu, see "*To display/remove reference waveforms*" on P42.

### To save setup files

Setup information includes acquisition information, such as vertical, horizontal, trigger, cursor, and measurement information etc. Setup files can be saved to one of 15 internal locations or to internal/external storage. To save the setup information:

- 1. Press the Save button.
- 2. Select Save in the bottom menu; select Save Setup.
- **3.** Select **Destination** in the right menu; in the left menu, select one of 15 internal locations, or select **File** to save to internal/external storage.
- 4. If the Destination is Set1 Set15, skip this step. If it is File, you can select File detail to enter the file explorer. The path and file name are shown in the Save To: line in the bottom. Select the save location, see "To select the path or file in file explorer" on P43. If you want to customize the file name, select Edit file name in the right menu, see "To edit file names" on P43. Select OK Save in the right menu.
- 5. Select OK Save in the right menu.

You can also save setup files by just pressing the **Copy** button, see "*To save with Copy button push*" on P44.

### To display/remove reference waveforms

- 1. Press the Save button.
- 2. Select **Ref** in the bottom menu.
- **3.** For R1 R4, switch to **ON**, the reference waveform will be displayed; switch to **OFF**, the reference waveform will be removed. You can display multiple reference waveforms at the same time.
- 4. When the reference waveform is ON, you can select Vertical in the right menu; select repeatedly to make the G symbol in front of div, turn the G knob to adjust the vertical position; then select to make the G symbol in front of the V/div below, turn the G knob to adjust the voltage division. Select Horizontal in the right menu; do the same operations as above to set the horizontal position and time base.
- **5.** Select **Ref detail** in the right menu, a window will pop up to show the sample rate and sample length.
- 6. Select Save to file in the right menu to save current reference waveform to internal/external storage. See the step 6 of "To save waveform data to reference waveform/storage" on P41.

## To recall waveform data in storage

1. Press the Save button.

- 2. Select Recall in the bottom menu; select Recall Waveform.
- **3.** Select the waveform file in file explorer (\*.csv/\*.bin), see "*To select the path or file in file explorer*" on P43.
- 4. Select the reference waveform that you want to load to in the right menu.
- **5.** Operate the selected reference waveform, see "*To display/remove reference waveforms*" on P42.

#### To recall setup files

Setup files can be recalled from one of 15 internal locations or from internal/external storage.

- 1. Press the Save button.
- 2. Select Recall in the bottom menu; select Recall Setup.
- **3.** Select **From** in the right menu; in the left menu, select one of 15 internal locations, or select **File** to recall from internal/external storage.
- 4. If you select one from Set1 Set15, select OK Load in the right menu.
- 5. If you select File, select File detail to enter the file explorer. Select the setup file in file explorer (\*.set), see "*To select the path or file in file explorer*" on P43. Select Recover Setup in the right menu.

### To select the path or file in file explorer

Introduction of the drive letters

**D**: Internal storage

**E/F etc.**: The USB flash drive plugged into the USB port of the oscilloscope

In file explorer, you can use touchscreen or the  ${\bf G}$  knob to select the storage, folder or file.

**Using touchscreen**: You can swipe up or down to scroll the file list; touch the drive letter, folder or file to select. Touch the drive letter or folder twice quickly to expand or collapse the file list.

**Using the G knob**: Turn the **G** knob to select in the file list. When the drive letter or folder is selected, push the **G** knob to expand or collapse the file list.

### To edit file names

The oscilloscope gives all files it creates a default name in the following format:


- owonXXXX.set for setup files
- owonXXXX.png, owonXXXX.bmp, or owonXXXX.jpg for image files
- owonXXXXYYY.csv or owonXXXXYYY.bin for waveform files
- owonXXXX.PF for rule files of pass/fail

The XXXX is an integer from 0000 to 9999.

For waveform files, the YYY is the channel of the waveform, and can be one of the following: CH1, CH2, CH3, or CH4 for the channels; RF1, RF2, RF3, or RF4 for

#### reference waveforms

When entering the interface of editing name, there will be a keypad dialog that let you touch to enter names. The length of file name is up to 256 characters. When you are done entering the file name, touch the dialog's Enter to confirm and close the keypad dialog.

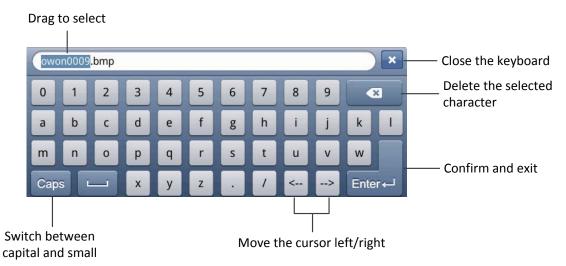

## To save with Copy button push

You can save the image, waveform data or setup file by just pressing the **Copy** button. After you have defined the save parameters with the Save menu, you can save files with a single push of the **Copy** button. For example, if you have defined the save operation to save image to external storage, then each push of the **Copy** button will save current screen image to the defined external storage.

To define the **Copy** button behavior, follow the steps below.

- 1. Press the Save button.
- 2. Select Save to Config in the bottom menu.
- 3. Select the save type from Screen Image, Waveform and Setup.
- **4.** Select **Change folder** to define the save path, see "*To select the path or file in file explorer*" on P43.

When you push the **Copy** button, the oscilloscope will perform the action that you just specified rather than requiring you to enter the Save menu each time.

## To manage file

You can create folder, rename or delete a file in File utilities menu.

- 1. Press the Save button.
- 2. Select **File utilities** in the bottom menu.
- **3.** Select path or file in file explorer, see "*To select the path or file in file explorer*" on P43.
- 4. Select Create folder, Rename or Delete in the right menu. See "To edit file

names" on P43.

# How to Implement the Auxiliary System Function Setting

## •Config

### To change the user interface language

- **1.** Press the **Utility** button, select **Config** in the left menu.
- 2. Select Language in the bottom menu; select the desired language in the right menu.

## To set the network parameters

Using the LAN port, the oscilloscope can be connected with a computer directly, or through the router to connect. The network parameters can be set in Net Config dialog. Refer to "*Using LAN Port*" on P60 for the operation steps.

- 1. Press the Utility button, select Config in the left menu.
- 2. Select Net Config in the bottom menu; the IP Config dialog will pop up.
- 3. Touch the byte to show the cursor, you can drag to select the numbers. Select the number keys below in the dialog to change the value, the range of each byte is 0 255. The range of Port is 0 65535. Touch 
  CK to complete the setting.

## To change the date and time

- 1. Press the Utility button, select Config in the left menu.
- 2. Select **Time Config** in the bottom menu; the Time Setting dialog will pop up.
- **3.** Touch the value that needs to be changed, a cursor will appear. You can drag to select the numbers. Turn the **G** knob to change the selected value. Touch **OK** to complete the setting.

## To enable/disable VGA output

The VGA port could be connected to a computer monitor. The image of the oscilloscope can be clearly displayed on the monitor.

- **1.** Press the **Utility** button, select **Config** in the left menu.
- 2. Select VGA as ON or OFF in the bottom menu.

## • Display

Press the **Utility** button and select **Display** in the left menu. The description of **Display Menu** is shown as the follows:

<b>Function Menu</b>	Setting	Description	
BackLight	0% - 99%	Drag the slider or turn the G knob to adjust	
DackLight	070 - 9970	the backlight.	
Graticule		Select the grid type	
Menu Display	5s - 50s, Infinite	Set the disappear time of left and right menu	
Gesture	ON, OFF	Enable/disable the touchscreen controls	

## •Calibrate

Press the **Utility** button and select **Calibrate** in the left menu. The description of **Calibrate Menu** is shown as the follows:

Function Menu	Description
Self Calibrate	Carry out the self-calibration procedure.
Factory Set	Call out the factory settings.

#### **Do Self-Calibration**

The self-calibration procedure can improve the accuracy of the oscilloscope under the ambient temperature to the greatest extent. If the change of the ambient temperature is up to or exceeds 5°C, the self-calibration procedure should be executed to obtain the highest level of accuracy.

Before performing a self-calibration, disconnect all probes or wires from the input connector. Press the "Utility" button, select Calibrate in the left menu, select Self Calibrate in the bottom menu. A confirmation window will pop up, select OK after everything is ready.

### •Pass/Fail

The **Pass/Fail** function monitors changes of signals and output pass or fail signals by comparing the input signal that is within the pre-defined mask.

Press the **Utility** button and select **Pass/Fail** in the left menu.

Function Menu	Setting	tting Description	
Operator	Enable	Control enable switch	
Operator	Operator	Control operate switch	
	Pass	Signal tested corresponds with the rule	
Output	Fail	Signal tested not correspond with the rule	
Output	Ring	Ring when it satisfies the rule	
	Info	Control the display status of info frame on the top left	
	Source	Select source $(1)$ , $(2)$ , $(3)$ , $(4)$ or Math	
	Horizontal	Change the Horizontal tolerance value by turning the	
Rule		G knob	
Kule	Vertical	Change the Vertical tolerance value by turning the	
		G knob	
	Create	Use the rule set as testing rule	
	Save	Save the rule to internal/external storage	
Save rule	Recall	Recall a rule from internal/external storage as the	
		testing rule	

The description of **Pass/Fail Menu** is shown as the follows:

### Pass/Fail test:

Detect whether the input signal is within the limits of the rule, if it exceeds limits of the rule, it is "Fail"; otherwise it is "Pass". Also it can output fail or pass signal by built-in and configurable output port. To run the test, read the following steps:

- 1. Press the Utility button, select **Pass/Fail** in the left menu.
- 2. Enable switch on: select **Operator** in the bottom menu, set **Enable** as **ON** in the right menu.
- 3. Create rule: select **Rule** in the bottom menu. Select **Source** in the right menu; select the desired source in the left menu. Select **Horizontal** or **Vertical** in the right menu; turn the **G** knob to set Horizontal or Vertical tolerance. Select **Create** in the right menu.
- **4.** Set output type: Select **Output** in the bottom menu. Choose any one or two of the options "**Pass**", "**Fail**" or "**Ring**". "**Pass**" and "**Fail**" are mutually exclusive options, which could not be chosen simultaneously.
- 5. Begin to test: Select **Operator** in the bottom menu. Select **Operator** as **Start** in the right menu, the test will begin.
- 6. Save rule: Select Save rule in the bottom menu. Select Save in the right menu to enter file explorer. The path and file name are shown in the Save To: line in the bottom. Select the save location, see "To select the path or file in file explorer" on P43. If you want to customize the file name, select Edit Filename in the right menu, see "To edit file names" on P43. Select OK Save in the right menu.
- **7. Recall rule:** Select **Save rule** in the bottom menu. Select **Recall** in the right menu to enter file explorer. Select rule file(\*.PF), see "*To select the path or file in file explorer*" on P43. Select the channel that you want to load to in the right menu.

### 5. Advanced User Guidebook

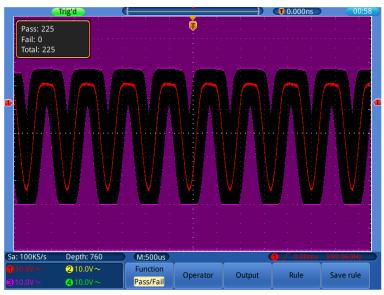


Figure 5-6 Pass/Fail test

#### Note:

- **1.** When Pass/Fail is ON, if you enter XY mode, Pass/Fail will be closed; in the XY mode, Pass/Fail menu is disabled.
- **2.** Under the status of stop, data comparing will stop, and when it goes on running, the number of Pass/Fail will increase from the former number, not from zero.

## •Sync Output

Press the **Utility** button and select **Sync Output** in the left menu. The description of **Sync Output** menu is shown as the follows:

<b>Function Menu</b>	Setting	Description
Туре	Trig level	Output trig signal synchronously
	Pass/Fail	Output High Level when Pass, and Low Level when Fail

## •System

Press the **Utility** button and select **System** in the left menu. The description of **System** menu is shown as the follows:

<b>Function Menu</b>	Description
	Select a topic in Help catalog to view the help content. To
Help	exit the Help window, touch $\checkmark$ in the top right corner or
	just press the panel buttons.
About	Show the series number and version
Update	Place the software upgrade in the root of the U disk; insert
	the U disk into the "USB Host port" in Figure 4-2 Rear
	Panel. Then select this menu item to update.

## How to Measure Automatically

Press the **Measure** button to display the menu for the settings of the Automatic Measurements.

The oscilloscopes provide 22 parameters for auto measurement, including Period, Freq, Mean, PK-PK, RMS, Max, Min, Vtop, Vbase, Vamp, Overshoot, Preshoot, Rise Time, Fall Time, +Width, -Width, +Duty, -Duty, Delay  $1 \rightarrow 2$ , Delay  $1 \rightarrow 2$ , Delay  $1 \rightarrow 2$ , Delay  $1 \rightarrow 2$ .

The "Automatic Measurements"	menu is described as the following table:
------------------------------	---

Funct	ion Menu	Setting	Description
	Туре		Select type in the left menu
Add	Source	1234	Select the source
Auu	Show all		Show all the measures on the screen
	Add		Add the selected measure types (shown at the
			left bottom, you could only add 8 types at most)
Delete Delete all	Type		Select the type need to be deleted in the left
	Type		menu
	Delete all		Delete all the measures
	Delete		Delete the chosen measure type

#### Measure

Only if the waveform channel is in the ON state, the measurement can be performed. The automatic measurement cannot be performed in the following situation: 1) On the reference waveform. 2) On the Math waveform. 3) On the XY format. 4) On the Scan format.

Measure the frequency, the period of the Channel CH1 and the mean, the PK-PK of the Channel CH2, following below steps:

- 1. Press the Measure button.
- 2. Select Add in the bottom menu.
- 3. Select Source in the right menu; select 1 in the left menu.
- 4. Select **Type** in the right menu; select **Period** in the left menu.
- 5. Select Add in the right menu, the period options added completes.
- 6. Select **Freq** in the left menu.
- 7. Select Add in the right menu, the frequency added completes, finish setting of CH1.
- 8. Select Source in the right menu; select 2 in the left menu.
- 9. Select Type in the right menu; select Mean in the left menu.
- **10.** Select **Add** in the right menu, the Mean added completes.

11. Select **PK-PK** in the left menu.

**12.** Select **Add** in the right menu, the PK-PK added completes, finish setting of CH2. The measured value will be displayed at the bottom left of the screen automatically (see *Figure 5-7*).

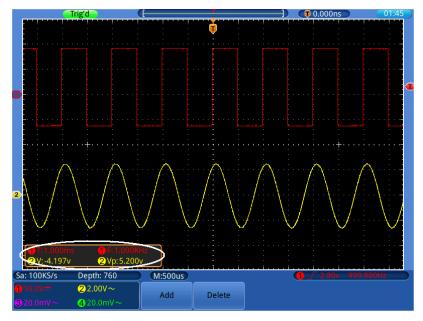


Figure 5-7 automatic measurement

#### The automatic measurement of voltage parameters

The TDS series oscilloscopes provide automatic voltage measurements including PK-PK, Max, Min, Mean, Vamp, RMS, Vtop, Vbase, Overshoot and Preshoot. *Figure 5-8* below shows a pulse with some of the voltage measurement points.

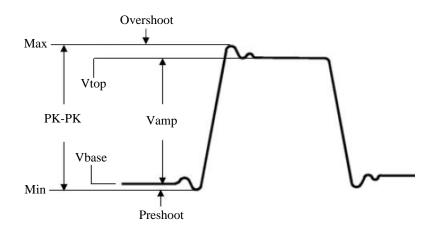


Figure 5-8

**PK-PK:** Peak-to-Peak Voltage.

- **Max:** The maximum amplitude. The most positive peak voltage measured over the entire waveform.
- Min: The minimum amplitude. The most negative peak voltage measured over the

entire waveform.

Vamp: Voltage between Vtop and Vbase of a waveform.

Vtop: Voltage of the waveform's flat top, useful for square/pulse waveforms.

Vbase: Voltage of the waveform's flat base, useful for square/pulse waveforms.

**Overshoot:** Defined as (Max-Vtop)/Vamp, useful for square and pulse waveforms.


**Preshoot:** Defined as (Min-Vbase)/Vamp, useful for square and pulse waveforms. **Mean:** The arithmetic mean over the entire waveform.

**RMS:** The true Root Mean Square voltage over the entire waveform.

#### The automatic measurement of time parameters

The TDS series oscilloscopes provide time parameters auto-measurements include Frequency, Period, Rise Time, Fall Time, +Width, -Width, +Duty, -Duty, Delay  $1 \rightarrow 2$ , Delay  $3 \rightarrow 4$ , Delay  $3 \rightarrow 4$ .

Figure 5-9 shows a pulse with some of the time measurement points.

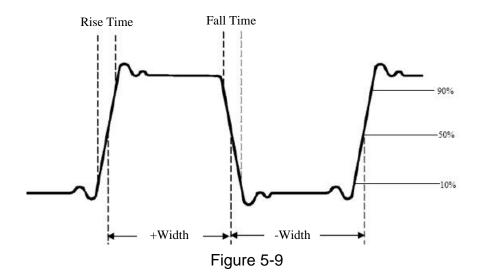

- **Rise Time:** Time that the leading edge of the first pulse in the waveform takes to rise from 10% to 90% of its amplitude.
- **Fall Time:** Time that the falling edge of the first pulse in the waveform takes to fall from 90% to 10% of its amplitude.

+Width: The width of the first positive pulse in 50% amplitude points.

-Width: The width of the first negative pulse in the 50% amplitude points.

**Delay**  $\bullet 2$  and **Delay**  $\bullet 4$ . The delay between the two channels at the rising edge.

**Delay**  $0 \rightarrow 2$  and **Delay**  $3 \rightarrow 4$  : The delay between the two channels at the falling edge.

+**Duty:** +Duty Cycle, defined as +Width/Period.

**-Duty:**-Duty Cycle, defined as -Width/Period.

## How to Measure with Cursors

Press the **Cursor** button to display the cursor measurement function menu in the bottom menu. If there is already a cursor measure window at the top right, you can touch it to display the Cursor Measure Menu too.

## The Cursor Measurement for normal mode:

The cursor measurement includes **Voltage Measurement** and **Time Measurement** at normal mode.

Function Menu	Se0tting	Description
	OFF	Turn off the cursor measurement
Туре	Voltage	Measure voltage using cursor
	Time	Measure time using cursor
Source	1/2/3/	Select the source that the cursor measurement will
Source	Source (4)/(1)	be applied to
	L1	Turn the $\mathbf{G}$ knob to adjust the position of L1
Line	L2	Turn the <b>G</b> knob to adjust the position of L2
	L1&L2	Two cursors are linked. Turn the <b>G</b> knob to adjust
		the two cursors together

The description of the **cursor measurement menu** is shown as the following table:

Perform the steps below for the voltage cursor measurement of the channel CH1:

- **1.** Press the **Cursor** button.
- 2. Select Source in the bottom menu; select ① in the left menu.
- **3.** Select **Type** in the bottom menu; select **Voltage** in the right menu. Two red dotted lines displayed along the horizontal direction of the screen, which indicating L1 and L2.
- 4. Select Line in the bottom menu; select L1 in the right menu. The G icon will appear beside the dotted line of L1, represents you can turn the G knob to adjust the position of L1. Select L2 to adjust the position of L2. Select L1&L2 to adjust the two cursors together. The cursor measure window at the top right shows the present position of two cursors and the absolute value of voltage difference (see *Figure 5-10*).

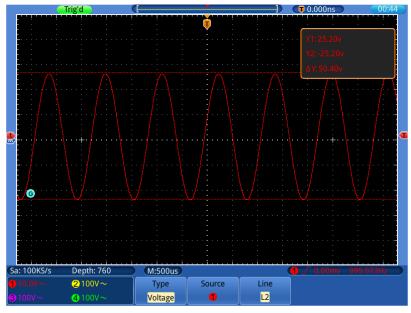


Figure 5-10 Waveform of Voltage Cursor Measurement

Carry out the steps below for the time cursor measurement of the channel CH1:

- **1.** Press the **Cursor** button.
- 2. Select Source in the bottom menu; select ① in the left menu.
- **3.** Select **Type** in the bottom menu; select **Time** in the right menu. Two red dotted lines displayed along the vertical direction of the screen, which indicating L1 and L2.
- 4. Select Line in the bottom menu; select L1 in the right menu. The G icon will appear beside the dotted line of L1, represents you can turn the G knob to adjust the position of L1. Select L2 to adjust the position of L2. Select L1&L2 to adjust the two cursors together. The cursor measure window at the top right shows the present time of cursor 1 and cursor 2, the absolute difference and the frequency (see *Figure 5-11*).

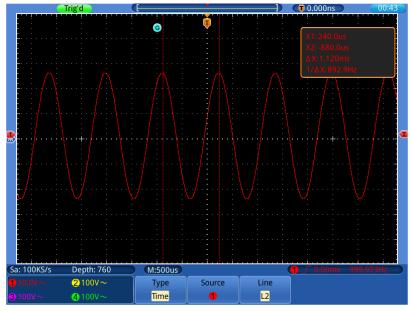


Figure 5-11 Waveform of Time Cursor Measurement

## The Cursor Measurement for FFT mode:

Perform the steps below for the Vamp cursor measurement in FFT mode:

- 1. Press the **Cursor** button.
- **2.** Select **Source** in the bottom menu; select  $\mathbf{\Phi}$  in the left menu.
- **3.** Select **Type** in the bottom menu; select **Vamp** in the right menu. Two blue dotted lines displayed along the horizontal direction of the screen, which indicating L1 and L2.
- 4. Select **Line** in the bottom menu; select **L1** in the right menu. The **G** icon will appear beside the dotted line of L1, represents you can turn the **G** knob to adjust the position of L1. Select **L2** to adjust the position of L2. Select **L1&L2** to adjust the two cursors together. The cursor measure window at the top right shows the present position of two cursors and the absolute value of amplitude difference (see *Figure 5-12*).

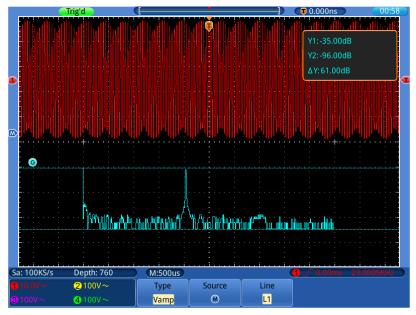


Figure 5-12 Wave of Vamp cursor measurement

Carry out the steps below for the Frequency cursor measurement:

- **1.** Press the **Cursor** button.
- 2. Select **Source** in the bottom menu; select  $\mathbf{\Phi}$  in the left menu.
- **3.** Select **Type** in the bottom menu; select **Frequency** in the right menu. Two blue dotted lines displayed along the vertical direction of the screen, which indicating L1 and L2.
- 4. Select **Line** in the bottom menu; select **L1** in the right menu. The G icon will appear beside the dotted line of L1, represents you can turn the **G** knob to adjust the position of L1. Select **L2** to adjust the position of L2. Select **L1&L2** to adjust the two cursors together. The cursor measure window at the top right shows the present position of two cursors and the absolute value of frequency difference (see *Figure 5-13*).



Figure 5-13 Wave of Freq cursor measurement

# How to Use Autoscale

This is a very useful function for first time users to carry out a simple and quick test on the input signal. The function is applied to follow-up signals automatically even if the signals change at any time. Autoscale enables the instrument to set up trigger mode, voltage division and time scale automatically according to the type, amplitude and frequency of the signals. Press the **Autoscale** button to display the function menu in the bottom.

Function Menu	Setting	Instruction
AutoScale	ON	Turn on Autoscale.
	OFF	Turn off Autoscale.
		Follow-up and adjust both vertical and horizontal settings.
Mode		Follow-up and only adjust horizontal scale. Follow-up and only adjust vertical scale.
Wave Period	$\wedge \wedge \wedge$	Show Multi-period waveforms.
	$\checkmark$	Only show one or two periods.

The menu is as follows:

If you want to measure the signal, you can do as the follows:

- 1. Press the Autoscale button, the function menu will appear in the bottom.
- 2. Select AutoScale as ON.
- 3. Select Mode in the bottom menu, select KIII in the right menu.

**4.** Select **Wave Period** in the bottom menu, select //// in the right menu, shown as *Figure 5-14*.

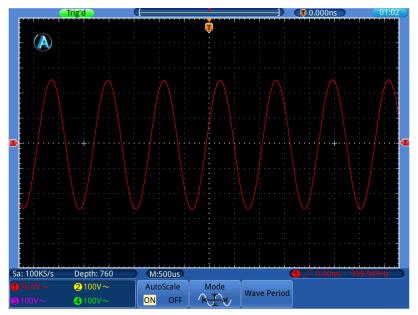


Figure 5-14 Autoscale Horizontal-Vertical multi-period waveforms

Note:

- 1. When entering into Autoscale mode, the symbol will appear on the top left of the screen.
- **2.** In the Autoscale mode, the oscilloscope can self-estimate "Trigger Mode" (Edge, Video), and set coupling as DC, trigger mode as Auto. The TRIGGER Menu is not available.
- **3.** In the mode of XY and STOP status, when entering into Autoscale, TDS will switch to YT mode and AUTO triggering.
- **4.** In the Autoscale mode, if you adjust the vertical position, voltage division, trigger level or time scale of CH1 CH4, the oscilloscope will turn off Autoscale function.
- 5. While the Autoscale is working, settings below will be made forcibly:
  - (1) If it is in zoom mode previously, the zoom mode will be turned off.
  - (2) The acquire mode will be set as **Sample**.

# How to Use Executive Buttons

Executive Buttons include Autoset, Run/Stop, Single, Copy.

## Autoset

It's a very useful and quick way to apply a set of pre-set functions to the incoming signal, and display the best possible viewing waveform of the signal and also works out some measurements for user as well.

The details of functions applied to the signal when using **Autoset** are shown as the following table:

<b>Function Items</b>	Setting
Acquisition Mode	Current
Vertical Coupling	DC
Vertical Scale	Adjust to the proper division.
Bandwidth	Full
Horizontal Level	Middle
Horizontal Sale	Adjust to the proper division
Trigger Type	Adjust to the proper type
Trigger Source	Show the minimum number of channels.
Trigger Coupling	DC
Trigger Slope	Current
Trigger Level	Mid-point Setting
Trigger Mode	Auto
Display Format	YT

**Run/Stop:** Enable or disable sampling on input signals.

**Notice**: When there is no sampling at STOP state, the vertical division and the horizontal time base of the waveform still can be adjusted within a certain range, in other words, the signal can be expanded in the horizontal or vertical direction.

- **Single:** Press this button you can set the trigger mode as single directly, so when trigger occurs, acquire one waveform then stop.
- **Copy:** You can save the image, waveform data or setup file by just pressing the **Copy** button. After you have defined the save parameters with the Save menu, you can save files with a single push of the **Copy** button. For more details, please see "*To save with Copy button push*" on P44.

# 6. Communication with PC

TDS series digital storage oscilloscope support communications with a PC through USB or LAN port. You can use the communication software to store, analyze and display the data.

Here is how to connect with PC. First, install the communication software on the supplied CD. Then there are several ways of connection to choose from.

# **Using USB Port**

- (1) Connection: Use a USB data cable to connect the USB Device port in the rear panel of the Oscilloscope to the USB port of a PC.
- (2) Install the driver: Run the communication software on PC, press F1 to open the help document. Follow the steps of title "I. Device connection" in the document to install the driver.
- (3) Port setting of the software: Run the software; click "Communications" in the menu bar, choose "Ports-Settings", in the setting dialog, choose "Connect using" as "USB". After connect successfully, the connection information in the bottom right corner of the software will turn green.

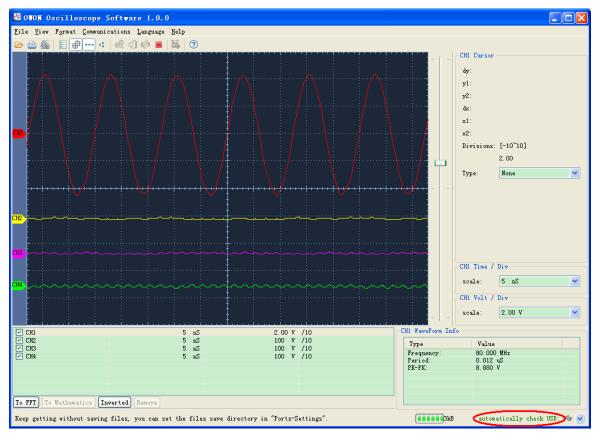


Figure 6-1: Connect with PC through USB port

# **Using LAN Port**

## **Connect directly**

- (1) Connection. Plug in the LAN line to the LAN port in the rear panel of the oscilloscope; plug the other end into the LAN interface of the computer.
- (2) Set the network parameters of the computer. Since the oscilloscope cannot support obtaining an IP address automatically, you should assign a static IP address. Here we set the IP address to 192.168.1.71.

ternet Protocol (TCP/IP) P	roperties
ieneral	
	automatically if your network supports ed to ask your network administrator for
O Obtain an IP address autom	atically
• Use the following IP address	s]
<u>I</u> P address:	192.168.1.71
S <u>u</u> bnet mask:	255 . 255 . 255 . 0
<u>D</u> efault gateway:	192.168.1.1
Obtain DNS server address	automatically
OUSe the following DNS serv	er addresses:
Preferred DNS server:	192.168.1.1
Alternate DNS server:	
	Ad <u>v</u> anced
	OK Cancel

Figure 6-2 Set the network parameters of the computer

(3) Set the network parameters of the Software. Run the software on the computer; choose the "Ports-settings" of the "Communications" menu item. Set "Connect using" to LAN. About the IP, the first three bytes is same as the IP in the step (2), the last byte should be different. Here, we set it to 192.168.1.72. The range of the port value is 0 - 65535, but the port which under 2000 is always be used, so it is suggested to set it to the value above 2000. Here, we set it to 3000.

e <sup>o</sup> <sub>+</sub> Ports-settings	×	
Connect using		
IP 192.168.1.72 port: (3000		
Custom USB Transfer Instructions(Some Types can choose to get bin / bmp or deep-memory data)		
🔾 WaveForm 💿 Image 🔵 High Memory Depth		
Get Image File".bmp"		
Setting:	Ē.	
Keep Getting Delay(ms): 2000 🗢		
Save data file automatically to below directory		
Browse		
For there is a limit number of files in one single directory of Windows File System (FAT16, FAT32, NTFS), the number of files to be saved is not certain, it is recommended to choose a directory in NTFS disk drive, turn off the storage channels in device, and use short directory path to save more files.		
<u>OK</u> Get Data now! Keep Getting no	«!	

Figure 6-3 Set the network parameters of the Software

(4) Set the network parameters of the oscilloscope. In the oscilloscope, Press the Utility button, select Config in the left menu. Select Net Config in the bottom menu. Set the IP Address and Port to the same value as the "Ports-settings" in the software

in step (3). You can refer to "To set the network parameters" on P45. Touch OK to

complete the setting. If you can get data normally in the software, the connection is successful.

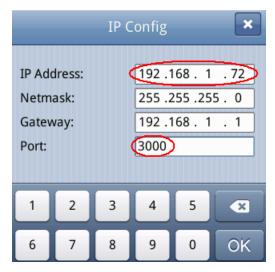


Figure 6-4 Set the network parameters of the oscilloscope

## **Connect through a router**

- (1) Connection. Use a LAN line to connect the oscilloscope with a router, the LAN port of the oscilloscope is in the rear panel; the computer should be connected to the router too.
- (2) Set the network parameters of the computer. Since the oscilloscope cannot support obtaining an IP address automatically, you should assign a static IP address. The Default gateway and Subnet mask should be set according to the router. Here we set the IP address to 192.168.1.71, Subnet mask is 255.255.255.0, Default gateway is 192.168.1.1.

#### 6.Communication with PC

Internet Protocol (TCP/IP) Prop	perties 🛛 🛛 🛛
General	
You can get IP settings assigned aut this capability. Otherwise, you need t the appropriate IP settings.	
O Obtain an IP address automatic	ally
• Use the following IP address	
<u>I</u> P address:	192 . 168 . 1 . 71
S <u>u</u> bnet mask:	255 . 255 . 255 . 0
Default gateway:	192.168.1.1
Obtain DNS server address aut	omatically
• Use the following DNS server a	ddresses:
Preferred DNS server:	192.168.1.1
Atemate DNS server:	* * *
	Ad <u>v</u> anced
	OK Cancel

Figure 6-5 Set the network parameters of the computer

(3) Set the network parameters of the Software. Run the software on the computer; choose the "Ports-settings" of the "Communications" menu item. Set "Connect using" to LAN. About the IP, the first three bytes is same as the IP in the step (2), the last byte should be different. Here, we set it to 192.168.1.72. The range of the port value is 0 - 65535, but the port which under 2000 is always be used, so it is suggested to set it to the value above 2000. Here, we set it to 3000.

e <sup>0</sup> <sub>+</sub> Ports-settings	×	
Connect using LAN		
IP 192.168.1.72 port: 3000		
Custom USB Transfer Instructions(Some Types can choose to get bin / bmp or deep-memory data)	5	
🔾 WaveForm 💿 Image 🔿 High Memory Depth		
Get Image File".bmp"		
Setting: Keep Getting Delay(ms): 2000 🗢		
Save data file automatically to below directory		
Browse		
For there is a limit number of files in one single directory of Windows File System (FAT16, FAT32, NTFS), the number of files to be saved is not certain, it is recommended to choose a directory in NTFS disk drive, turn off the storage channels in device, and use short directory path to save more files.		
<u>O</u> K Get Data now! Keep Getting now!		

Figure 6-6 Set the network parameters of the Software

(4) Set the network parameters of the oscilloscope. In the oscilloscope, Press the

Utility button, select Config in the left menu. Select Net Config in the bottom menu. Set the IP Address and Port to the same value as the "Ports-settings" in the software in step (3). The Netmask and Gateway should be set according to the router. You can

refer to "*To set the network parameters*" on P45. Touch OK to complete the setting. If you can get data normally in the software, the connection is successful.



Figure 6-7 Set the network parameters of the oscilloscope

To learn about how to operate the software, you can press F1 in the software to open the help document.

# 7. Demonstration

# **Example 1: Measurement a Simple Signal**

The purpose of this example is to display an unknown signal in the circuit, and measure the frequency and peak-to-peak voltage of the signal.

#### 1. Carry out the following operation steps for the rapid display of this signal:

- (1) Set the probe menu attenuation coefficient as **10X** and that of the switch in the probe switch as **10X** (see "*How to Set the Probe Attenuation Coefficient*" on P13).
- (2) Connect the probe of Channel 1 to the measured point of the circuit.
- (3) Press the **Autoset** button.


The oscilloscope will implement the **Autoset** to make the waveform optimized, based on which, you can further regulate the vertical and horizontal divisions till the waveform meets your requirement.

#### 2. Perform Automatic Measurement

The oscilloscope can measure most of the displayed signals automatically. To measure the period and frequency of the Channel 1 and the mean and peak-to-peak voltage of the Channel 2, follow below steps:

- (1) Press the **Measure** button.
- (2) Select Add in the bottom menu.
- (3) Select Source in the right menu; select (1) in the left menu.
- (4) Select **Type** in the right menu; select **Period** in the left menu.
- (5) Select Add in the right menu, the period options added completes.
- (6) Select **Freq** in the left menu.
- (7) Select Add in the right menu, the frequency added completes, finish setting of CH1.
- (8) Select Source in the right menu; select (2) in the left menu.
- (9) Select **Type** in the right menu; select **Mean** in the left menu.
- (10) Select Add in the right menu, the Mean added completes.
- (11)Select **PK-PK** in the left menu.
- (12) Select Add in the right menu, the PK-PK added completes, finish setting of CH2.

The measured value will be displayed at the bottom left of the screen automatically (see *Figure 7-1*).



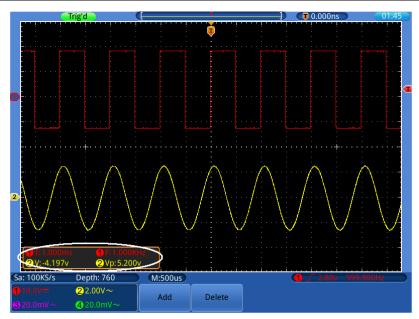


Figure 7-1 Measure Frequency and PK-PK value for a given signal

# **Example 2: Gain of an Amplifier in a Metering Circuit**

The purpose of this example is to work out the Gain of an Amplifier in a Metering Circuit. First we use Oscilloscope to measure the amplitude of input signal and output signal from the circuit, then to work out the Gain by using given formulas.

Set the probe menu attenuation coefficient as **10X** and that of the switch in the probe as **10X** (see "*How to Set the Probe Attenuation Coefficient*" on P13).

Connect the oscilloscope CH1 channel with the circuit signal input end and the CH2 channel to the output end.

#### **Operation Steps:**

- (1) Press the **Autoset** button and the oscilloscope will automatically adjust the waveforms of the two channels into the proper display state.
- (2) Press the **Measure** button.
- (3) Select Add in the bottom menu.
- (4) Select Source in the right menu; select ① in the left menu.
- (5) Select **Type** in the right menu; select **PK-PK** in the left menu.
- (6) Select Add in the right menu.
- (7) Select Source in the right menu; select ② in the left menu.
- (8) Select Add in the right menu.
- (9) Read Vp of Channel 1 and Channel 2 from the measure window at the bottom left of the screen (see *Figure 7-2*).
- (10)Calculate the amplifier gain with the following formulas.

Gain = Output Signal / Input signal

```
Gain (db) = 20 \times \log (gain)
```

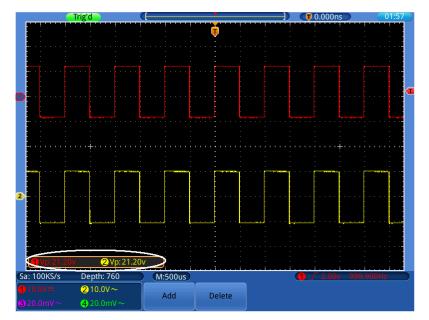


Figure 7-2 Waveform of Gain Measurement

# **Example 3: Capturing a Single Signal**

It's quite easy to use Digital Oscilloscope to capture non-periodic signal, such as a pulse and burr etc. But the common problem is how to set up a trigger if you have no knowledge of the signal? For example, if the pulse is the logic signal of a TTL level, the trigger level should be set to 2 volts and the trigger edge be set as the rising edge trigger. With various functions supported by our Oscilloscope, user can solve this problem by taking an easy approach. First to run your test using auto trigger to find out the closest trigger level and trigger type, this helps user to make few small adjustments to achieve a proper trigger level and mode. Here is how we achieve this.

#### The operation steps are as follows:

- (1) Set the probe menu attenuation coefficient to 10X and that of the switch in the probe to 10X (see "*How to Set the Probe Attenuation Coefficient*" on P13).
- (2) Adjust the **VOLTS/DIV** and **SEC/DIV** knobs to set up a proper vertical and horizontal ranges for the signal to be observed.
- (3) Press the **TRIGGER Menu** button.
- (4) Select **Trig Mode** in the bottom menu; select **Edge** in the left menu.
- (5) Select Source in the bottom menu; select (1) in the left menu.
- (6) Select **Coupling** in the bottom menu; select **DC** in the right menu.
- (7) Select Slope in the bottom menu; switch it to Rising.
- (8) Select Mode&HoldOff in the bottom menu; select Single in the right menu.
- (9) Adjust the trigger level to the roughly 50% of the signal to be measured, you can use the **TRIG LEVEL** knob or the touchscreen (see "Set the Vertical System")

through touchscreen" on P18).

(10) Check the Trigger State Indicator on the top of the screen, if it is not Ready, push down the **Run/Stop** button and start acquiring, wait for trigger to happen. If a signal reaches to the set trigger level, one sampling will be made and then displayed in the screen. By using this approach, a random pulse can be captured easily. For instance, if we want to find a burst burr of high amplitude, set the trigger level to a slightly higher value of the average signal level, press the **Run/Stop** button and wait a trigger. Once there is a burr occurring, the instrument will trigger automatically and record the waveform during the period around the trigger time. By turning the **HORIZONTAL POSITION** knob in the horizontal control area in the panel, you can change the horizontal triggering position to obtain the negative delay, making an easy observation of the waveform before the burr occurs (see *Figure 7-3*).

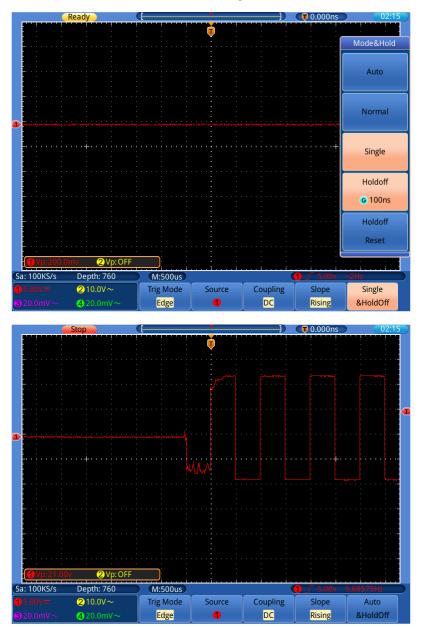


Figure 7-3 Capturing a Single Signal

# **Example 4: Analyze the Details of a Signal**

Noise is very common inside most of the electronic signal. To find out what's inside the noise and reduce the level of noise is very important function our oscilloscope is capable to offer.

### Noise Analysis

The level of noise sometime indicates a failure of electronic circuit. The Peak Detect functions acts an important role to help you to find out the details of these noise. Here is how we do it:

- (1) Press the Acquire button.
- (2) Select Mode in the bottom menu; select Peak detect in the right menu.

The signal displayed on the screen containing some noise, by turning on Peak Detect function and changing time base to slow down the incoming signal, any peaks or burr would be detected by the function (see *Figure 7-4*).

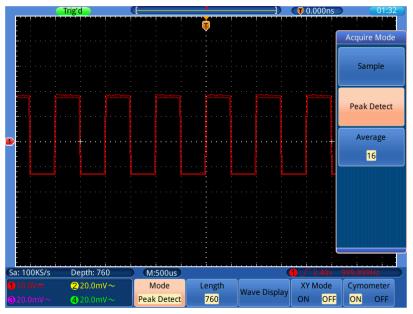


Figure 7-4 Signal with Noises

## Separate Noises from the Signal

When focusing on signal itself, the important thing is to reduce the noise level as lower as possible, this would enable user to have more details about the signal. The Average function offered by our Oscilloscope can help you to achieve this.

Here are the steps for how to enable Average function.

- (1) Press the Acquire button.
- (2) Select Mode in the bottom menu; select Average in the right menu.
- (3) Turn the G knob and observe the waveform obtained from averaging the waveforms of different average number.

User would see a much reduced random noise level and make it easy to see more details of the signal itself. After applying Average, user can easily identify the burrs on the rising and falling edges of some part of the signal (see *Figure 7-5*).

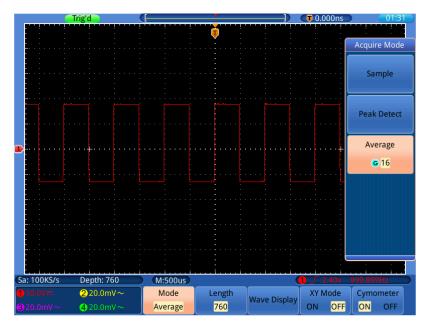


Figure 7-5 Reduce Noise level by using Average function

## **Example 5: Application of X-Y Function**

#### Examine the Phase Difference between Signals of two Channels

Example: Test the phase change of the signal after it passes through a circuit network.

X-Y mode is a very useful when examining the Phase shift of two related signals. This example takes you step by step to check out the phase change of the signal after it passes a specified circuit. Input signal to the circuit and output signal from circuit are used as source signals.

For the examination of the input and output of the circuit in the form of X-Y coordinate graph, please operate according to the following steps:

- (1) Set the probe menu attenuation coefficient for **10X** and that of the switch in the probe for **10X** (see "*How to Set the Probe Attenuation Coefficient*" on P13).
- (2) Connect the probe of channel 1 to the input of the network and that of Channel 2 to the output of the network.
- (3) Turn on CH1 and CH2, turn off CH3 and CH4 using the CH1 CH4 keys.
- (4) Push down the **Autoset** button, with the oscilloscope turning on the signals of the two channels and displaying them in the screen.
- (5) Turn the **VOLTS/DIV** knob, making the amplitudes of two signals equal in the rough.
- (6) Press the Acquire button to display menu in the bottom.

(7) Switch XY Mode as ON.The oscilloscope will display the input and terminal characteristics of the network

in the Lissajous graph form.

- (8) Turn the VOLTS/DIV and VERTICAL POSITION knobs, optimizing the waveform.
- (9) With the elliptical oscillogram method adopted, observe and calculate the phase difference (see *Figure 7-6*).

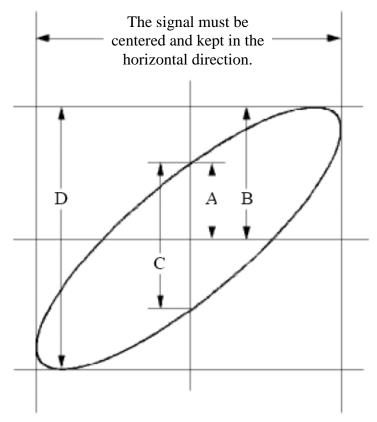


Figure 7-6 Lissajous Graph

Based on the expression sin (q) =A/B or C/D, thereinto, q is the phase difference angle, and the definitions of A, B, C, and D are shown as the graph above. As a result, the phase difference angle can be obtained, namely,  $q =\pm \arcsin (A/B)$  or  $\pm \arcsin (C/D)$ . If the principal axis of the ellipse is in the I and III quadrants, the determined phase difference angel should be in the I and IV quadrants, that is, in the range of  $(0 - \pi/2)$  or  $(3\pi/2 - 2\pi)$ . If the principal axis of the ellipse is in the II and IV quadrants, that range of  $(\pi/2 - \pi)$  or  $(\pi - 3\pi/2)$ .

# **Example 6: Video Signal Trigger**

Observe the video circuit of a television, apply the video trigger and obtain the stable video output signal display.

## Video Field Trigger

For the trigger in the video field, carry out operations according to the following steps:

- (1) Press the TRIGGER Menu button.
- (2) Select **Trig Mode** in the bottom menu; select **Video** in the left menu.
- (3) Select Source in the bottom menu; select ① in the left menu.
- (4) Select Modu in the bottom menu; select NTSC in the right menu.
- (5) Select Sync in the bottom menu; select Field in the right menu.
- (6) Turn the VOLTS/DIV, VERTICAL POSITION and SEC/DIV knobs to obtain a proper waveform display (see *Figure 7-7*).



Figure 7-7 Waveform Captured from Video Field Trigger

# 8. Troubleshooting

## 1. Oscilloscope is powered on but no Display.

- Check whether the power connection is connected properly.
- Restart the instrument after completing the checks above.
- If the problem persists, please contact Lilliput and we will be under your service.
- 2. After acquiring the signal, the waveform of the signal is not displayed in the screen.
  - Check whether the probe is properly connected to the signal connecting wire.
  - Check whether the signal connecting wire is correctly connected to the BNC (namely, the channel connector).
  - Check whether the probe is properly connected with the object to be measured.
  - Check whether there is any signal generated from the object to be measured (the trouble can be shot by the connection of the channel from which there is a signal generated with the channel in fault).
  - Make the signal acquisition operation again.

## 3. The measured voltage amplitude value is 10 times or 1/10 of the actual value.

Look at the attenuation coefficient for the input channel and the attenuation ration of the probe, to make sure they are match (see "*How to Set the Probe Attenuation Coefficient*" on P13).

## 4. There is a waveform displayed, but it is not stable.

- Check whether the **Source** item in the **TRIG MODE** menu is in conformity with the signal channel used in the practical application.
- Check on the trigger **Type** item: The common signal chooses the **Edge** trigger mode for **Type** and the video signal the **Video**. Only if a proper trigger mode is applied, the waveform can be displayed steadily.
- Try to change the trigger coupling into the high frequency suppress and the low frequency suppress to smooth the high frequency or low frequency noise triggered by the interference.

## 5. No Display Responses to the Push-down of Run/Stop.

Check whether Normal or Signal is chosen for Polarity in the TRIG MODE menu and the trigger level exceeds the waveform range.

If it is, make the trigger level is centered in the screen or set the trigger mode as Auto. In addition, with the **Autoset** button pressed, the setting above can be completed automatically.

6. The displaying of waveform seems getting slow after increasing AVERAGE value in Acqu Mode (see "*How to Implement Sampling Setup*" on P36 ), or a longer duration is set in the Persist in Display (see "*Persist*" on P39).

It's normal as the Oscilloscope is working hard on many more data points.

# 9. Technical Specifications

Unless otherwise specified, the technical specifications applied are for TDS series only, and Probes attenuation set as 10X. Only if the oscilloscope fulfills the following two conditions at first, these specification standards can be reached.

- This instrument should run for at least 30 minutes continuously under the specified operating temperature.
- If change of the operating temperature is up to or exceeds 5°C, do a "Self-calibration" procedure (see "*How to Implement Self-calibration*" on P14).

All specification standards can be fulfilled, except one(s) marked with the word "Typical".

Performance Characteristics		Instruction			
		TDS7074		70 MHz	
		TDS7104		100 MHz	
D	andwidth	TDS8104		100 MHz	
D	anawiath	TDS8204		200 MHz	
		TDS8304		300 MHz	
		TDS9304	300 MHz		
	Channel	4			
	Mode	Noi	rmal, Peak de	tect, Averaging	
	Waveform Capture	50,000		00	
	rate				
		TDS7074	Four CH	500MS/s	
		TDS7074 TDS7104	Dual CH	1GS/s*	
		105/104	Single CH	1GS/s	
		TDS8104 TDS8204	Four CH	1GS/s	
Acquisition			Dual CH	2GS/s*	
	Max Sample rate		Single CH	2GS/s	
	(real time)	TDS8304	Four CH	1.25GS/s	
			Dual CH	2.5GS/s*	
			Single CH	2.5GS/s	
			Four CH	1.6GS/s	
		TDS9304	Dual CH	3.2GS/s*	
			Single CH	3.2GS/s	
	Input coupling	DC, AC, Ground			
Input	Input impedance	1 M $\Omega$ ± 2%, in parallel with 10 pF ± 5 pF 50 $\Omega$ ± 1%			
r	Probe attenuation factor	1X, 10X, 100X, 1000X			

Performance Ch	Instruction				
	Max. input voltage	<ol> <li>MΩ input impedance:</li> <li>400 V (PK-PK) (DC + AC PK-PK)</li> <li>50 Ωinput impedance:</li> <li>5 V (PK-PK) (DC + AC PK-PK)</li> </ol>			
	Bandwidth limit	20 MHz, fu	ll bandwidth	l	
	Channel –channel isolation	50 Hz: 100 10 MHz: 40			
	Time delay between channel(typical)		150	) ps	
		TDS7074	Four CH	0.5S/s -	500MS/s
		TDS7074 TDS7104	Dual CH	0.5S/s -	1GS/s
			Single CH	0.5S/s -	1GS/s
		TDS8104	Four CH	0.5S/s -	1GS/s
		TDS8104 TDS8204	Dual CH	0.5S/s -	2GS/s
	Sampling rate range		Single CH	0.5S/s -	2GS/s
	Sampling fate fange		Four CH	0.5S/s -	1.25GS/s
		TDS8304	Dual CH	0.5S/s -	2.5GS/s
			Single CH	0.5S/s -	2.5GS/s
		TDS9304	Four CH	0.5S/s -	1.6GS/s
			Dual CH	0.5S/s -	3.2GS/s
			Single CH	0.5S/s -	3.2GS/s
Horizontal	Interpolation (sin x)/x				
System		F	Four CH	250MS/s	7.6M, 760k, 76k
		TDS7074		500MS/s	7.6k, 760
		TDS7104	Dual CH	500MS/s	7.6M, 760k, 76k
			4       Dual CH $0.5S/s - 1GS/s$ Single CH $0.5S/s - 1GS/s$ 4       Four CH $0.5S/s - 1GS/s$ 4       Dual CH $0.5S/s - 1GS/s$ 5       Single CH $0.5S/s - 2GS/s$ 5       Single CH $0.5S/s - 2GS/s$ 4       Dual CH $0.5S/s - 2GS/s$ 5       Single CH $0.5S/s - 2.5GS$ 5       Single CH $0.5S/s - 3.2GS$ 5       Single CH $0.5S/s - 3.2GS$ 5       Single CH $0.5S/s - 3.2GS$ (sin x)/x       (sin x)/x       (sin x)/x         (sin x)/x         (sin x)/x         (Single CH         6       Dual CH $500MS/s$ $7.6M$ 7.6       Single CH       1GS/s       7.6M         7.6       Single CH       1GS/s       7.6M         7.6       Single CH       1GS/s       7.6M         7.6       1GS/s       7.6M </td <td></td>		
	Max Record length				7.6M, 760k,
				1GS/s	7.6k, 760
		TDS8104	Dual CH	500MS/s	7.6M, 760k, 76k
		TDS8204		2GS/s*	7.6k, 760
			Single CH	1GS/s	7.6M, 760k, 76k
				2GS/s	7.6k, 760

Performance Characteristics Instruction						
			Four CH	250MS/s	7.6M, 760k, 76k	
		TDS8304		1.25GS/s	7.6k, 760	
			Dual CH	500MS/s	7.6M, 760k, 76k	
				2.5GS/s*	7.6k, 760	
			Single CH	1GS/s	7.6M, 760k, 76k	
				2.5GS/s	7.6k, 760	
			Four CH	250MS/s	7.6M, 760k, 76k	
				1.6GS/s	7.6k, 760	
		TDS9304	Dual CH	500MS/s	7.6M, 760k, 76k	
				3.2GS/s*	7.6k, 760	
			Single CH	1GS/s	7.6M, 760k, 76k	
				3.2GS/s	7.6k, 760	
	Scanning speed					
	(S/div)	2 ns/div – 100 s/div, step by 1 - 2 - 5				
	Sampling rate / relay					
	time accuracy		± 100 ppm			
			Single:			
	Interval( $\triangle T$ )	$\pm$ (1 interval time + 100 ppm × reading+0.6 ns);				
	accuracy (DC - 100MHz)	Average>16:				
	(	$\pm (1 \text{ interval time} + 100)$		ppm $\times$ reading+0.4 ns)		
	A/D converter	8 bits resolution (4 Channels simultaneously)		taneously)		
	Sensitivity	2 mV/div - 10 V/div				
	Displacement	$\pm 10 \text{ div}$				
		TDS7074 70 MHz				
Vertical system		TDS7104 100 MHz				
	Analog bandwidth	TDS8104 100 MHz				
		TDS8204 200 MHz				
		TDS8304 300 MHz				
		TDS9304 300 MHz				
	Low Frequency $\geq 10$ Hz (at input, AC coupling, -3 dB)		dB)			

y. reclinical Specifications				
Performance Characteristics		Instruction		
		TDS7074	≤5.0 n	s (at input, Typical)
	Rise time	TDS7104	≤3.5 n	s (at input, Typical)
		TDS8104	≤3.5 ns	s (at input, Typical)
		TDS8204	≤1.7 ns	s (at input, Typical)
		TDS8304	≤1.17	ns (at input, Typical)
	TDS9304 ≤1.1	≤1.17	ns (at input, Typical)	
	DC accuracy	±3%		
	DC accuracy (average)	Average $\geq 16$ : $\pm (3\% \text{ rdg} + 0.05 \text{ div})$ for $\Delta V$		
	Waveform inverted O	ON/OFF		
	Cursor	$\Delta V$ and $\Delta T$ between cursors		
Measurement	Automatic	PK-PK, Max, Min, Vtop, Vbase, Vamp, Mean, RMS, Overshoot, Preshoot, Freq, Period, Rise Time, Fall Time, Delay $A \rightarrow B f$ , Delay $A \rightarrow B f$ , +Width, -Width, +Duty, -Duty		
Wiedsureinent	Waveform Math	+, -, *, / ,FFT		
	Waveform storage	4 reference waveforms (support for move, zoom in, zoom out and expanded display)		
		Bandwidth		Full bandwidth
	Lissajous figure	Phase diffe	rence	±3 degrees
Communication port	USB2.0, USB for file storage; LAN port; VGA interface			

\* Max Sample rate (real time) for Dual CH:

Select one of the channels in CH1 and CH2 and the other one in CH3 and CH4.

## Trigger:

Performance	Characteristics	Instruction	
Trigger level range	Internal $\pm 6$ div from the screen center		
Trigger level Accuracy (typical)	Internal ±0.3div		
Trigger displacement	According to Record length and time base		
Trigger Holdoff range	100 ns - 10 s		
50% level setting (typical)	Input signal frequency $\geq 50 \text{ Hz}$		
Edge trigger	slope	Rising, Falling	
	Sensitivity	0.3 div	
Pulse trigger	Trigger condition	Positive pulse: $>, <, =$ Negative pulse: $>, <, =$	
	Pulse Width range	30 ns – 10 s	
	Modulation	Support standard NTSC, PAL and SECAM broadcast systems	
Video Trigger	Line number range	1 - 525 (NTSC) and 1 - 625 (PAL/SECAM)	
Slope Trigger	Trigger condition	Positive pulse: >, <, = Negative pulse: >, <, =	
	Time setting	24 ns – 10 s	

# **General Technical Specifications**

## Display

Display Type	8" touchscreen color LCD
Display Resolution	800 (Horizontal) $\times$ 600 (Vertical) Pixels
Display Colors	65536 colors, TFT screen

## **Output of the Probe Compensator**

Output Voltage (Typical)	About 5 V, with the Peak-to-Peak voltage $\geq 1 \text{ M}\Omega$ .
Frequency (Typical)	Square wave of 1 kHz

#### Power

Mains Voltage	100 - 240 VAC RMS, 50/60 Hz, CAT II
Power Consumption	< 24 W

#### Environment

Tomporatura	Working temperature: 0°C - 40°C
Temperature	Storage temperature: $-20^{\circ}$ C - $60^{\circ}$ C
Relative Humidity $\leq 90\%$	
II. 1. 1.4	Operating: 3,000 m
Height	Non-operating: 15,000 m
Cooling Method Natural convection	

## **Mechanical Specifications**

Dimension	$380 \text{ mm} \times 180 \text{ mm} \times 115 \text{ mm} (L*H*W)$
Weight	About 1.9 kg

### **Interval Period of Adjustment:**

One year is recommended for the calibration interval period.

# **10. Appendix**

## **Appendix A: Enclosure**

### **Standard Accessories:**

- 4 x Passive probes: 1.2 m, 1:1 (10:1)
- 1 x CD (PC link application software)
- 1 x Power cord: up to the standards of the country in which it is used.
- 1 x USB cable
- 1 x Quick Guide

## **Appendix B: General Care and Cleaning**

### **General Care**

Do not store or leave the instrument where the liquid crystal display will be exposed to direct sunlight for long periods of time.

**Caution:** To avoid any damage to the instrument or probe, do not exposed it to any sprays, liquids, or solvents.

## Cleaning

Inspect the instrument and probes as often as operating conditions require. To clean the instrument exterior, perform the following steps:

- 1. Wipe the dust from the instrument and probe surface with a soft cloth. Do not make any scuffing on the transparent LCD protection screen when clean the LCD screen.
- 2. Disconnect power before cleaning your Oscilloscope. Clean the instrument with a wet soft cloth not dripping water. It is recommended to scrub with soft detergent or fresh water. To avoid damage to the instrument or probe, do not use any corrosive chemical cleaning agent.

Warning: Before power on again for operation, it is required to confirm that the instrument has already been dried completely, avoiding any electrical short circuit or bodily injury resulting from the moisture.